



Washing Machine user manual



This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product. To receive a more complete service, please register your product at

www.samsung.com/register



features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

Features of your new Samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialized Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

Energy Saving

This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Samsung Inverter motor.

Eco Bubble Wash

Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

Less Noise & Vibration

This Samsung washer performs very quietly minimizing noise and vibration with 3D vibration sensors and smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.

Quick Wash

No time to waste! Quick Wash program can help your busy life - now you can wash your favorite clothes (up to 2Kg) in 15 minutes!

Eco Drum Clean

Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

Baby Care

Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

Wool Certified

The machine has been tested and passed the required Woolmark Company specification for machine washable wool products. This mark is the upgraded certification better than the existing Woolmark, which guarantees not only washing performance but also fabric care for wool products. Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

Hand Wash

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

2 features

Delay End

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

Child Lock

The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

Digital Graphic Display (selected models)

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

LCD Display (selected models)

LCD display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 37 tells you what to do if something goes wrong with your new washing machine.

satety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance, Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage .
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
$\overline{\mathbb{S}}$	Do NOT disassemble.
8	Do NOT touch.
*	Follow directions explicitly.
→	Unplug the power plug from the wall socket.
<u></u>	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
Ø	Note

These warning signs are here to prevent injury to you and others. Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.



Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

safety information

A SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

 If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



CAUTION SIGNS FOR INSTALLATION



This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



SEVERE WARNING SIGNS FOR USING



If the appliance is flooded, Turn off the water & power supply immediately and contact your nearest service centre.

- Do not Touch the power plug with wet hands.
- Failure to do so may cause electric shock.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

satety information



Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance.

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.



Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.



If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

AUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.

Open the Water Tap slowly after a long period of non-use.

 The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

 If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

 If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)

 If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

 If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

satety inform



Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.
- Woollen Bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as Bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.



AND SEVERE WARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

contents

SETTING UP YOUR WASHING 13 Checking the parts MACHINE 14 Meeting installation requirements 15 Alcove or closet installation 15 Drain Electrical supply and grounding 14 15 Flooring 15 Surrounding temperature 14 Water Supply 15 Installing your washing machine WASHING A LOAD OF LAUNDRY 21 Washing for the first time Basic instructions 21 22 Using the control panel 25 Child lock 26 Delay end Eco Bubble 27 25 Eco Display (selected LCD models) 26 My cycle 25 Sound off 29 Washing clothes manually 28 Washing clothes using the cycle selector 29 Laundry guidelines 30 Detergent and additives information 31 Detergent drawer Liquid Detergent (Selected models) 31 30 Which detergent to use **CLEANING AND MAINTAINING YOUR** 32 Eco Drum Clean WASHING MACHINE 33 Draining the washing machine in an emergency 34 Cleaning the debris filter 34 Cleaning the exterior 35 Cleaning the detergent drawer and drawer recess 35 Cleaning the water hose mesh filter 36 Repairing a frozen washing machine Storing your washing machine 37 Check these points if your washing machine... TROUBLESHOOTING AND INFORMATION CODES 38 Information codes **CALIBRATING YOUR WASHING** Calibration mode **MACHINE CYCLE CHART** Cycle chart **APPENDIX** 41 Fabric care chart 41 Protecting the environment 41 Declaration of conformity 42 Specifications


12 contents


setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

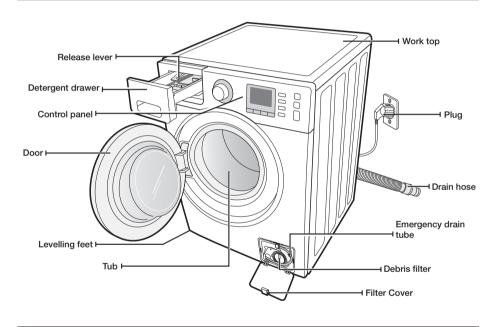

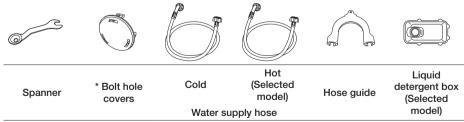



^{*} Bolt hole covers: The number of bolt hole covers depends on the model (3~6 covers).

setting up your washing machine _13

g up your washing

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding



Never use an extension cord.

WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- AC 220-240V / 50Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:

- · Making water taps easily accessible.
- · Turning off taps when the washing machine is not in use.
- · Periodically checking for leaks at water inlet hose fittings.

A Before using your washing machine for the first time, check all connections at the water INING valve and taps for leaks.

14 setting up your washing machine

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

 Sides - 25 mm
 Rear - 50 mm

 Top - 25 mm
 Front - 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- · Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- · Is away from direct sunlight
- · Has adequate ventilation
- Will not be freezing (below 0 °C)
- Is away from heat sources such as oil or gas
- · Has enough space so that the washing machine doesn't stand on its power cord

setting up your washing machine _15


setting up your washing machine

STEP 2


Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit


1. Loosen all the bolts with the supplied wrench.

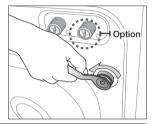

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

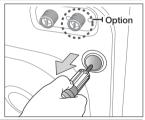

3. Fill the holes with the supplied plastic covers.

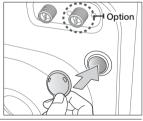

4. Store the shipping bolts away safely in case you have to move the washing machine in the future

A Packaging materials can be dangerous to children; keep all packaging material (plastic warming bags, polystyrene, etc.) well out of the reach of children.

16_ setting up your washing machine


STEP 3

Adjusting the Levelling feet



When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

- 1. Slide the washing machine into position.
- 2. Level your washing machine by turning the levelling feet in and out as necessary by hand.



3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.




STEP 4

Connecting the water and drain

Connecting the water supply hose

- Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.
- The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.
- Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

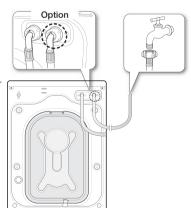

For selected models with an additional hot water intake:


- 1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
- Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
- 3. Use a Y-piece if you only want to use cold water.

setting up your washing machine _17

setting up your washing machine

Connecting the water supply hose

1. Remove the adaptor from the water supply hose.

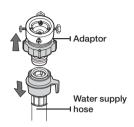

First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.




 Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards.
 Turn part (2) following the arrow and connect (1) and (2).




4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.



After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

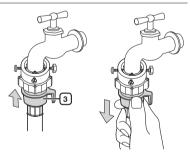

Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

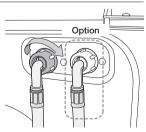


18_ setting up your washing machine

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.



Do not use your washing machine if there is a water leak.

This may cause electric shock or injury.

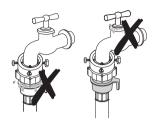

 If the water tap has a screw type tap, connect the water supply hose to the tap as shown.





Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

• Connect the water supply hose to the tap as shown.




setting up your washing machine _19

setting up your washing

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

- 1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.
- 2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.




3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.



The standpipe drain requires;

- minimum diameter 5 cm.
- · minimum carry-away capacity 60 liter per minute.



STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)



Test run

Make sure that you install your washing machine correctly by running the Rinse+Spin cycle after the installation is complete.

STEP 6

Select the Language (selected LCD models)

At the beginning setting (After power on), the "Language setting" message appears on the display. you can select one language among English, French, Dutch, German, Italian, or Spanish. (Polish, Russian, Turkish, Chinese or Thai.) * Language selections can be changed according to derived models.

- 1. Push the Rinse button to choose a language.
- 2. Push the Spin button to set the chosen language.



To reselect the language, press the Rinse and Spin buttons simultaneously for 3 seconds.



The LCD display Language may differ depending on the model.



20 setting up your washing machine

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME




Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

- 1. Press the **Power** button.
- 2. Add a little detergent to the detergent compartment (11) in the detergent drawer.
- 3. Turn on the water supply to the washing machine.
- 4. Press the Start/Pause button.



This will remove any water that might be left over in the machine from the manufacturer's test run.

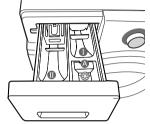

Compartment ①: Detergent for prewash, or starch.

Compartment (II): Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.




To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment (a): Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX)

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

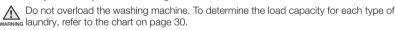




- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- . Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.
- 2. Close the door until it latches.
- 3. Turn the power on.
- 4. Add detergent and additives to the dispenser drawer.
- 5. Select the appropriate cycle and options for the load. The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
- 6. Press the Start/Pause button.

washing a load of laundry

USING THE CONTROL PANEL

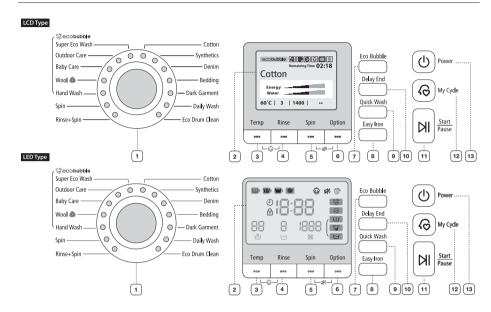

Select the tumble pattern and spin speed for the cycle.



For detailed information, refer to "Washing clothes using the cycle selector". (see page 28)

Cotton - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

Denim - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

Bedding - For bed spread, bed sheet, Bedding cover etc.

CYCLE SELECTOR

Wash under 2.5kg and only 1 kind of Bedding to achieve the best result.

Dark Garment - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

Daily Wash - Use for everyday items such as underwear and shirts. Eco Drum Clean - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

Super Eco Wash - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

Outdoor Care - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

Baby Care - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

	 Wool - Only for machine-washable wool. A load should be less than 2.0 kg. The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M1108 (Certificate Number issued by I.W.S. Nominee Co., Ltd.) Hand Wash - A very light wash cycle as gentle as a hand wash. Spin - Performs an additional spin cycle to remove more water. Rinse + Spin - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. 		
2 LCD DISPLAY / DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.		
3 TEMP SELECTION BUTTON	Press this button repeatedly to cycle through the available water temperature options: (Cold Water 🖞, 20 °C, 30 °C, 40 °C, 60 °C and 95 °C).		
RINSE SELECTION BUTTON	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.		
	Press the button repeatedly to cycle through the available speeds for the spin cycle.		
SPIN SELECTION	WF1124 \', \overline{\Omega}, 400, 800, 1000, 1200, 1400 rpm		
5 BUTTON	"No spin "" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold "" - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.		
6 OPTION SELECTION BUTTON	Press this button repeatedly to cycle through the options: Soak → Intensive → Prewash → Soak + Intensive → Soak + Prewash → Intensive + Prewash → Soak + Intensive + Prewash → off "Prewash '⊥'': Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby Care. "Soak '⊥'': Use this option to effectively remove stains from your laundry by soaking your laundry. The Soak function is performed 13 minutes into the wash cycle. The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Daily Wash, Super Eco Wash, Baby Care. "Intensive '¼'': Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.		

washing a load of laundry

7 ECO BUBBLE SELECTION BUTTON	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). Other wash cycles do not need this option and automatically turn the Generator OFF. On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).	
8 EASY IRON SELECTION BUTTON	Press this button to prepare your laundry so that it can be easily ironed by reducing the wrinkles during the spin cycle. Easy Iron is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Dark garment, Daily wash, Super Eco Wash, Baby Care When Easy Iron is selected, you can set the spin cycle speed up to 800 rpm. (If you select Easy Iron with a spin cycle speed set to higher than 800 rpm, the spinning speed is automatically changed to 800 rpm.)	
9 QUICK WASH SELECTION BUTTON	For lightly soiled garments and less than 2kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalaced load, fluctuation in the electricity supply and extra options selected. • Press this button repeatedly to choose cycle time: 15min → 20min → 30min → 40min → 50min → 1hr → Off Powdered/Liquid detergent should be under 20g(for 2kg load) or washing detergent may remain on the clothes.	
DELAY END SELECTION BUTTON	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.	
START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.	
MY CYCLE SELECTION BUTTON	Choose your favorite cycle including temperature, spin, soil level, option, etc.	
13 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.	

Eco Display (selected LCD models)

This function decreases the brightness of the LCD backlight if you do not use the Cycle Selector or press any of the buttons for the pre-determined period of time.

Operating Mechanism

If you press the Start/Pause button, the Eco Display function automatically runs after 1 minute. If you use the Cycle Selector or press any button, the Eco Display function is cancelled. The Eco Display function will start automatically unless you use the Cycle Selector or press the button within 1 minute.



Unless the Start/Pause button is pressed, the Eco Display function is not activated.

Child lock


The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp** and **Rinse** buttons at the same time for 3 seconds. "Child Lock "will be lit when this feature is activated.



When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

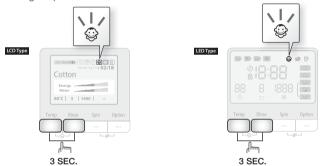


Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off 50" will be lit when this feature is activated.

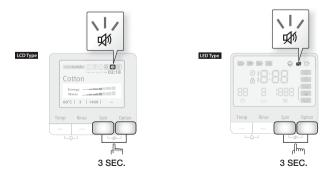

washing a load of laundry

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

- Manually or automatically set your washing machine according to the type of laundry you are washing.
- 2. Press the **Delay End** button repeatedly until the delay time is set.
- 3. Press the **Start/Pause** button. The "Delay End ③" indicator will be lit, and the clock will begin counting down until it reaches the set time.
- To cancel a Delay End function, press the Power button and then turn the washing machine on again.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The "My Cycle" light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

- 1. Turn the water supply on.
- 2. Press the Power button.
- 3. Select cycle using the Cycle Selector.
- 4. After cycle selection, set each option.
- See the "Cycle Chart" on page 40 for available option settings with each cycle.
- 5. You can then store the selected cycle and options by pressing and holding the My Cycle button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.
- You can change the My Cycle settings by repeating the same process above.

 The last used setting will be displayed the next time you choose the My Cycle function.
- If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.



The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash	Available	Not available
Eco Drum Clean	Not available	-

A different bubble function may be applied depending the course.



Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

- 1. Open the door, place the laundry inside the wash tub and close the door.
- 2. Press the Power button.
- 3. Select a function.
- 4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.
 - · Add the appropriate amount of detergent into the detergent compartment (II), and add the fabric softener to softener compartment ® just under the fiber softener base line (MAX) of "A").
 - When the Prewash course is selected, add detergent into the prewash compartment ① as well.
 - To use liquid detergent, leave the liquid detergent box in the drawer(refer to "Liquid Detergent" section on page 31).




Do not add powdered detergent into the liquid detergent box.

- 5. Press the Start/Pause button.
 - Press the **Start/Pause** button to start the wash.
 - The amount of the laundry is automatically detected and the laundry is washed.
 - Once a washing machine operation begins, you cannot add or select the bubble function.



- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.



washing a load of laundr

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

- 1. Turn on your sink's water tap.
- 2. Press the Power button.
- 3. Open the door.
- 4. Load the articles one at a time loosely into the drum, without overfilling it.
- 5. Close the door.
- 6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.



Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby care cycles. It is only necessary if your clothing is heavily soiled.

- 7. Use the Cycle Selector to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
- 8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
- 9. Press the Start/Pause button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

- 1. Press the Start/Pause button to unlock the door.
- The door cannot be opened when the water is too HOT or the water level is too HIGH.
- 2. After closing the door, press the Start/Pause button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

- 1. Open the door.
- 2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

- 1. Turn the water supply on.
- 2. Press the **Power** button on the washing machine.
- 3. Open the door.
- 4. Load the articles loosely into the drum one at a time, without overfilling it.
- 5. Close the door.
- Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
- Press the **Temp** button to select the temperature. (Cold water, 20 °C, 30 °C, 40 °C, 60 °C, 95 °C)
- 8. Press the **Rinse** button to select the required number of rinse cycles. The maximum number of rinse cycles is five.

The wash duration is increased accordingly.

- 9. Press the Spin button to select the spin speed.(W : No Spin)
- 10. Press the Delay End button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
- 11. Press the Start/Pause button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.



Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
 - Colour: Divide whites and colours. Wash new colour items separately.
 - Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new
 woollen items, curtains and silk articles. Check the labels on the items you are washing or
 refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

washing a load of laundry

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WF1124
Cotton - average/lightly soiled - heavily soiled	12.0 kg
Synthetics	5.0 kg
Denim	3.0 kg
Bedding	2.5 kg
Outdoor Wear	2.0 kg
Wool	2.0 kg




- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load.
 If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Bedding cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Bedding cover, the recommended load capacity is 2.5 kg or less.



Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

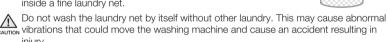

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.



Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.


Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.




Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.


- Pull out the detergent drawer on the left side of the control panel
- 2. Add the recommended amount of laundry detergent directly into the detergent compartment (1) before starting your washing machine.

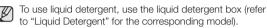




3. Add the recommended amount of fabric softener into the softener compartment (a) if required. DO NOT exceed the MAX FILL (b) line.



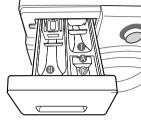






- 4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ①.
- When washing large items do NOT use the following detergetnt types.
 - · Tablet and capsule type detergents
 - · Detergents using a ball and net



Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blacked).

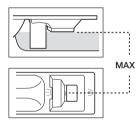



Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.



DO NOT fill above the MAX line.

- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.



cleaning and maintaining your

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.


- 1. Press the **Power** button.
- 2. Turn the Cycle Selector to the ECO Drum Clean course.
 - You can only use the Delay End function.
 - The water temperature during the ECO Drum Clean is



You cannot change the temperature.



- 3. Place the appropriate amount of cleansing agent into the detergent compartment (11) and close the detergent drawer (when cleaning the drum using a cleansing agent).
 - Be sure to use the recommended cleansing agent for cleaning the drum.
 - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).



- 4. Press the Start/Pause button.
 - If you press the Start/Pause button, the ECO Drum Clean course begins.



- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- In the ECO Drum Clean course, never use normal detergent.
- Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

32_ cleaning and maintaining your washing machine

The ECO Drum Clean Auto Alarm Function

- If the "ECO Drum Clean" indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the "ECO Drum Clean" indicator on the display and the lamp on the Cycle Selector are turned off. However, the "ECO Drum Clean" indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.




In case of the alarm, please also clean the debris filter (refer to "Cleaning the debris filter" section on page 34). Otherwise the performance of the bubble function may lower down.




DRAINING THE WASHING MACHINE IN AN EMERGENCY

- 1. Unplug the washing machine from the power supply.
- 2. Open the filter cover by pressing down and pulling its handle.



3. Open the emergency drain cap by pulling it.



- 4. Hold the cap on the end of the emergency drain tube and slowly pull it out.
- 5. Allow all the water to flow into a bowl.



Remain water maybe more than you expected. Prepare larger bowl.

- 6. Reinsert the emergency drain cap and the drain tube.
- 7. Replace the filter-cover.



cleaning and maintaining your washing machine _33

cleaning and maintaining your


CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous section.) If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.




Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 33.)



- 2. Open the filter cover by using a key or coin.
- 3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
- Unscrew the debris filter cap.



- 6. Replace the debris filter cap.
- 7. Replace the filter cover.




Do not open the debris filter cap while the machine is running or hot CAUTION water may flow out.




- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

CLEANING THE EXTERIOR

- 1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
- 2. Use a soft cloth to dry the surfaces.
- Do not pour water onto the washing machine.






34_ cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

- Press the release lever on the inside of the detergent drawer and pull the drawer out.
- Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

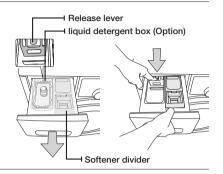

3. Wash all parts under running water.



- 4. Clean the drawer recess with an old toothbrush.
- Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
- 6. Push the drawer back into place.
- To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.



CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

- 1. Turn off the water supply to the washing machine.
- 2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
- 3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
- 4. Push the filter back into place.
- **5.** Screw the hose back onto the washing machine.
- 6. Make sure the connections are watertight and turn on the tap.

cleaning and maintaining your washing machine _35

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

- 1. Unplug the washing machine.
- 2. Pour warm water over the tap to loosen the water supply hose.
- 3. Remove the water supply hose and soak it in warm water.
- 4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
- Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

- Select the Cotton cycle and push the Quick Wash button and run your washing machine through the cycle without a load.
- 2. Turn the water taps off and disconnect the inlet hoses.
- 3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.
- If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

36_ cleaning and maintaining your washing machine

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	 Make sure your washing machine is plugged in. Make sure the door is firmly closed. Make sure the water source tap(s) are turned on. Make sure to press the Start/Pause button.
Has no water or not enough water	 Turn the water tap on fully. Make sure the water source hose is not frozen. Straighten the water intake hoses. Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	 Make sure your washing machine is running with sufficient water pressure. Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	 Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. Make sure that the shipping bolts are removed. Make sure your washing machine is not touching any other object. Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	Straighten the drain hose. Eliminate kinked hoses.Make sure the debris filter is not clogged.
Door is locked shut or will not open.	The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	Make sure the door is firmly closed.Make sure that laundry is not caught in the door.
4E	Make sure the source water tap is turned on.Check the water pressure.Clean the mesh filters of water hose.
5E	 Clean the debris filter. Make sure the drainage hose is installed correctly. Clean the water hose mesh filter.
UE	The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E/Uc	Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

38_ troubleshooting and information codes

calibrating your washing machine

CALIBRATION MODE

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

- 1. Remove laundry or any contents in the machine and turn off the machine.
- 2. Press the Temp button and Delay End button simultaneously, and press the Power button in addition. Then the machine turns on.
- 3. Press the Start button to activate "Calibration Mode".
- **4.** The drum rotates clockwise and counterclockwise approximately for 3 minutes.
- 5. When "Calibration Mode" is finished, "EN/Cycle is complete" appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

calibrating your washing machine _39

cycle chart

CYCLE CHART

(• user option)

		DETERGENT				Spin Speed(MAX) rpm	
PROGRAM	Max load(kg)	Pre-wash	wash	Softener	Max Temp (°C)	WF1124	
Cotton	12.0	•	yes	•	95	1400	
Synthetics	5.0	•	yes	•	60	1200	
Denim	3.0	•	yes	•	60	800	
Bedding	2.5	•	yes	•	40	800	
Dark Garment	6.0	•	yes	•	40	1200	
Daily Wash	3.0	•	yes	•	60	1400	
Eco Drum Clean	-	-	-	-	70	400	
Super Eco Wash	6.0	•	yes	•	40	1200	
Outdoor Care	2.0	-	yes	•	40	1200	
Baby Care	6.0	•	yes	•	95	1400	
Wool	2.0	-	yes	•	40	800	
Hand Wash	2.0	-	yes	•	40	400	

PROGRAM	Eco Bubble	Delay end	Easy Iron	Intensive	Soak	Quick Wash	Cycle time (min)
Cotton	•	•	•	•	•	•	138
Synthetics	•	•	•	•	•	-	77
Denim	•	•	•	•	•	-	64
Bedding	•	•	•	•	•	-	93
Dark Garment	•	•	•	•	-	-	69
Daily Wash	•	•	•	•	•	-	52
Eco Drum Clean	-	•	-	-	-	-	101
Super Eco Wash	•	•	•	•	•	-	110
Outdoor Care	•	•	-	-	-	-	74
Baby Care	•	•	•	•	•	-	128
Wool	•	•	-	-	-	-	53
Hand Wash	•	•	-	-	-	-	29

- 1. A cycle with a prewash takes approx. 17 minutes longer.
- The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
 - Please run Calibration Mode after the installation (see page 39).
- 3. Cotton 40°C/60°C + intensive + Eco bubble are programs according to EN60456.
- 4. Daily Wash: Short program for test institutes.
- 5. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
- 6. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

40_ cycle chart



FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundery problems.

\square	Resistant material	\overline{a}	Can be ironed at 100 °C max
\Box	Delicate fabric	\bowtie	Do not iron
95 95	Item may be washed at 95 °C	A	Can be dry cleaned using any solvent
607 607	Item may be washed at 60 °C	P	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
40 40	Item may be washed at 40 °C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item may be washed at 30 °C	\otimes	Do not dry clean
₩	Item may be hand washed		Dry flat
\bowtie	Dry clean only		Can be hung to dry
<u></u>	Can be bleached in cold water		Dry on clothes hanger
×	Do not bleach	<u></u>	Tumble dry, normal heat
<u></u>	Can be ironed at 200 °C max	0	Tumble dry, reduced heat
<u></u>	Can be ironed at 150 °C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance,
 please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be
 connected to a power source. Remove the door so that animals and small children cannot get trapped
 inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.



SPECIFICATIONS

ТҮРЕ			FRONT LOADING WASHING MACHINE	
MODEL NAME			WF1124XA/ WF1124XB WF1124ZA/ WF1124ZB	
DIMENSIONS			W600×D600×H850(mm)	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			17160 L/annual	
NET WEIGHT	NET WEIGHT		71 kg	
WASH AND SPIN CA	WASH AND SPIN CAPACITY		12.0 kg	
	WASHING	220 V	150 W	
		240 V	150 W	
POWER	WASH AND	220 V	2000 W	
CONSUMPTION	HEATING	240 V	2400 W	
	SPIN	230V	300 W	
	PUMPING		30 W	
SPIN REVOLUTIONS	rpm		1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
EGYPT	08000-726786	www.samsung.com

Code No. DC68-03038P-05_EN

WF1124ZA(C/U)
WF1124ZB(C/U)
WF1124XA(C/U)
WF1124XB(C/U)



غسالة ملابس دليل المستخدم



تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة ١٠٠٪.

تخيل الإمكانات الهائلة

نشكرك على شراء هذا المنتج من Samsung. للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل المنتج على الموقع

www.samsung.com/register



ميزات الغسالة الجديدة من Samsung

ستغير غسالتك الجديدة رؤيتك لعملية الغسيل. حيث تتوفر بغسالة Samsung كافة الميزات التي جُعل عملية الغسل عملية سهلة وممتعة قدر الإمكان بدءًا من وظيفة Eco Bubble (الفقاعات صديقة البيئة) الخصصة وانتهاءً بتوفير العالة:

• ميزات الغسالة الجديدة من Samsung

ستغير غسالتك الجديدة رؤيتك لعملية الغسيل. حيث تتوفر بغسالة Samsung كافة البزات التي جُعل عملية الغسل عملية سهلة ومتعة قدر الإمكان بدءًا من وظيفة Eco Bubble (الفقاعات صديقة البيئة) الخصصة وانتهاءً بتوفير الطاقة.

• توفير الطاقة

يوفر هذا الطراز استهلاكًا أوفر للطاقة مقارنة بالغسالة من الفئة A القياسية وذلك بفضل "نظام مولد الفقاعات" المتميز و"محرك التشغيل الهادئ العكسى من Samsung".

• غسل بالفقاعات صديق للبيئة

يوفر نظام "الغسل بالفقاعات صديق البيئة" الفقّال من Samsung نظافة أفضل مع عناية متقدمة بالأقمشة. تسمح ميزة "الفقاعات صديقة البيئة" بتوزيع المسحوق بالتساوي وتخلل الأنسجة بشكل أسرع وأعمق.

ضوضاء واهتزازات أقل

تعمل غسالة Samsung بهدوء. ما يقلل الضوضاء والاهتزازات وذلك بفضل مستشعر الاهتزازات ثلاثي الأبعاد وتقنية التحكم الذكى التي جُعلها خافظ على أقل معدل مكن للاهتزاز. ومن ثم خافظ الحاوية على توازن مثالي.

• الغسل السريع

وداعاً لإهدار الوقت! يساعد برنامج "الغسل السريع" في توفير المزيد من الوقت, الآن يكنك غسل كل ما لديك من ملابس (حتى ٢ كجم) في غضون ١٥ دقيقة!

· تنظيف الحاوية صديق البيئة

يساعد استخدام ميزة "تنظيف الحاوية صديق البيئة" في الخفاظ على نظافة الغسالة حتى بدون استخدام أي منظفات أو مبيضات. حيث بكنك الخفاظ على نظافة الحاوية ورائحتها مع هذا البرنامج اللتخصص للتنظيف.

• العنابة علابس الأطفال

تتضمن غسالة Samsung برامج غسل تعمل على حماية ملابس الأطفال ذوي البشرة الحساسة. حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسل. بالإضافة إلى أن هذه البرامح تصنف الملابس إلى أنواع مختلفة يتم غسلها وفقًا لخصائص كل نوع بحيث بشعر الأطفال بالانتعاش من نظافة الملابس وقتما يرتدونها.

وثوقية غسيل الصوف

تم اختبار هذه الغسالة حيث اجتازت المواصفات التي حددتها شركة Woolmark لغسل المنتجات الصوفية في الغسالة. وتُعد هذه العلامة هي الاعتماد الذي تم ترقيته وهو أفضل من علامة Woolmark الحالية. بما يضمن توفير الأداء الفائق للغسالة والعناية بأقمشة المنتجات الصوفية. يجب غسل الملابس وفقاً للإرشادات المدونة على الملصق الموجود على الملابس كما حددتها شركتي Samsung هادهاته.

• الغسل اليدوى

مكنك أن خخطى بعناية خاصة بغسل ملابسك عن طريق خديد درجة حرارة ملائمة ودورة غسيل هادئة وكمية ماء مناسبة.

ا __ میزات

• تأجيل التوقف

تعمل هذه المِزة على تأجيل الدورة حتى ١٩ ساعة تضاف ساعة بعد ساعة وزيادة سهولة استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

• التأمين ضد عبث الأطفال

تضمن وظيفة "التأمين ضد عبث الأطفال" الخفاظ على الغسالة ضد عبث الأطفال. وتعمل ميزة الأمان هذه على منع الأطفال من العبث بتشغيل الغسالة. كما تقوم بتنبيهك عند تشغيلها.

• لوحة عرض رسومية رقمية (طرازات محددة)

تتميز "لوحة العرض الرسومية الرقمية" بوضوحها وسهولة استخدامها ما يعمل على تقليل الضوضاء والقاطعة إلى أدنى حد. تتبح لك "لوحة العرض الرسومية الرقمية" بالإضافة إلى سهولة تشغيلها إجراء عمليات الضبط بسرعة ودقة للحصول على نتائج غسيل فائقة.

• شاشة عرض LCD (طرازات محددة)

تتميز لوحة التحكم المزوّة بشاشة عرض LCD بوضوحها وسهولة استخدامها بما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. كما تتيح لك "شاشة العرض" بالإضافة إلى سهولة تشغيلها إجراء عمليات الضبط بسرعة ودقة للحصول على نتائج غسيا. فائقة.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام والعناية بغسالة Samsung الجديدة. يحكنك الرجوع إليه للتعرّف على وظائف لوحة التحكم. وللحصول على تعليمات حول كيفية استخدام الغسالة. بالإضافة إلى الحصول على تلميحات لتحقيق أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "ا**ستكشاف المشاكل وحلها ورموز العلومات**" في صفحة ٣٧ إلى ما يجب عليك فعله في حالة حدوث عطل بغسالتك الجديدة.

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يتضمن هذا الدليل معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة المتوفرة بالغسالة.

ما يجب أن تعرفه حول إرشادات السلامة

برجى قراءة هذا الدليل بعناية لضمان معرفة كيفية تشغيل الميزات والوظائف المتعددة لجهازك الجديد بسلامة وفاعلية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. استخدم هذا الجهاز للغرض الخصص له فقط على النحو الموضح في دليل الإرشادات الذي بين يديك.

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف الحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها.

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

ونظرًا لأن إرشادات التشغيل التالية تنطيق على طُرز متعددة. فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو مخاوف. اتصل بأقرب مركز خدمة أو ابحث عن التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات المهمة للسلامة

- 333 5 3.	<u> </u>
<u> </u>	المارسات الخطيرة أو غير الأمنة التي قد تؤدي إلى إصابات خطيرة للأشخاص واأو الموت و/أو تلف في المتلكات.
ننبیه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات للأشخاص و/أو تلف في المتلكات.
ننبيه	لتقليل احتمالات نشوب حريق أو حدوث انفجار أو التعرّض لصدمة كهربية أو إصابة جسدية أثناء استخدام الغسالة، اتّبع احتياطات السلامة الأساسية التالية:
	منوع الحاولة.
\boxtimes	منوع الفك.
8	منوع اللمس.
*	اتَّبع الإرشادات بعناية.
*	افصل قابس التيار الكهربي من مقبس الحائط.
=	تأكد من توصيل الغسالة بطرف أرضي لمنع التعرّض لصدمة كهربية.
	اتصل مِركز الخدمة للحصول على تعليمات.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

🚖 اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربية والأجزاء التحركة. ولتشغيل هذا الجهاز بأمان يجب عليك التعرّف على طريقة تشغيله وتوخى الحذر أثناء استخدامه.

٤_ معلومات السلامة

لذا، يرجى اتباعها بعناية.

وبعد قراءة هذا الدليل. احتفظ به في مكان آمن للرجوع إليه في المستقبل.

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا مكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

△ يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدى أو حسى أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا الخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.

جب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف القابس (سلك التيار الكهربي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من قابس التيار الكهربي، وصنابير التزوّد بالماء وأنابيب تصريف الماء، بحيث يسهل الوصول إليها.

بالنسبة للغسالات ذات فتحات تهوية يقاعدتها، تأكد من عدم سد السجاد أو أنة عوائق أخرى لهذه الفتحات.

يُنصح باستخدام مجموعة خراطيم جديدة وعدم استخدام الخراطيم القدمة مرةً أخرى.

معلومات السلامة



التحذير الصارمة المتعلقة بالتركيب المارمة المتعلقة بالتركيب



🚖 🕽 يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.

قد ينتج عن الفشل في إتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض

يجب توخى الحذر عند رفع الجهاز لأن وزنه ثقيل

قم بتوصيل سلك الطاقة بمقبس حائط من ٢٠٠-١٤٠ فولت / ٥٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.

- قد تؤدى مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة
- تأكد من تطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. حيث قد يؤدى عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق. لذا. تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة. مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.

- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

أدخل قابس التيار الكهربي في مقبس الحائط في الاجّاه الصحيح بحيث يكون اجَّاه السلك ناحية الأرض.

 إذا قمت بإدخال قابس الطاقة في المقبس في الانجاه المعاكس, فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال. نظرًا لأنها قد تمثل خطرًا عليهم.

قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو قابس التيار الكهربي أو سلك التيار الكهربائي. اتصل بأقرب مركز صيانة.



يجب توصيل الجهاز بالأرضي بشكل سليم.

- جب توصيل الجهاز بالارضي بسحل سبيم. كالا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون. قد يؤدى ذلك إلى التعرّض لصدمة كهربية أو نشوب حريق أو حدوث انفجار أو مشكلات بالمنتج.
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد



يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.

كما يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء

يجب عدم تركيب هذا الجهاز في مكان درجة حرارته منخفضة

- قد يؤدي الجليد إلى انفجار الأنابيب.

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم محولاً كهربيًا.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالفًا أو مقبس حائط غير مُحكم.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

1_ معلومات السلامة

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.

يجب عدم لف سلك الطاقة أو طيه.

يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.

- افصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

لا تضع سلك الطاقة والأنابيب في مكان قد يعرّضك للتعثّر والسقوط فوقها.



علامات التنبيه المتعلقة بالتركيب



🚖 يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربي.

يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.

قد ينتج عن الفشل في إتباع هذه التعليمات وجود اهتزازات أو خركات أو ضوضاء أو مشاكل غير طبيعية مع المنتج.



🗥 علامات التحذير الصارمة المتعلقة بالاستخدام



في حالة تعرض الجهاز لكمية زائدة من الماء. قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري. واتصل بأقرب مركز صيانة.

- لا تلمس سلك التيار الكهربي بيدين مبتلتين.
- قد يؤدى الفشل في الالتزام بذلك إلى حدوث صدمة كهربية.

في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان. افصل قابس التيار الكهربي فورًا واتصل بأقرب مركز

- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.
- في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المُسال. وما إلى ذلك). بجب تهوية المكان فورًا بدون لمس قابس التيار الكهربي. لا تقم بلمس الجهاز أو سلك التيار الكهربي.
 - لا تستخدم مروحة تهوية.
 - قد ينتج عن الشرارة حدوث صدمة كهربية أو نشوب حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب فصل حامل باب الغسالة عند التخلص من الجهاز.

في حالة الانحشار داخل الغسالة. قد يتعرض الطفل للاحتجاز والاختناق حتى الموت.

تأكد من إزالة الغلاف (الإسفنج / الفوم) الموجود أسفل الغسالة قبل الاستخدام.

معلومات السلامة _٧_

معلومات السلامة

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/العصر عند درجة حرارة عالية).
 - قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.
 - قد ينتج عن ذلك حدوث إصابات.
 - قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو حدوث إصابة.
 - لا تضع يدك حّت الغسالة.

فوق الغسالة.

- قد پنتج عن ذلك حدوث إصابات.
- لا تلمس قابس التيار الكهربي بيدين مُبتلتين.
- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.
- يجب عدم إيقاف تشغيل الغسالة وفصل قابس التيار الكهربي أثناء تشغيلها.
- قد يؤدي إدخال قابس التيار الكهربي مرة أخرى في مأخذ الخائط إلى حدوث شرارة ينتج عنها صدمة كهربية أو نشوب حريق. يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق
 - قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.
 - لا تضع يدك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.
 - قد ينتج عن ذلك حدوث إصابات.
 - يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. بل يجب دائمًا إمساك القابس بإحكام وسحبه في خط مستقيم من
 - قد يؤدى تلف السلك إلى حدوث عطل تماس كهربائي و/أو حريق و/أو التعرّض لصدمة كهربية.



- لا خَاول إصلاح الجهاز أو فكَّه أو تعديله بنفسك.
- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني, وما إلى ذلك) خلاف المنصهر القياسي.
 - في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه. اتصل بأقرب مركز صيانة إليك.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض



- 👔 عندما يصبح خرطوم التزوّد بالماء غير محكم وينتج عنه تسريب للماء في الجهاز. يجب فصل سلك الطاقة من مأخذ الكهرباء. حيث قد يؤدى عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.
 - يجب فصل قابس التيار الكهربي عند عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.
 - حيث قد يؤدي عدم الالتزام بذلك إلى التعرِّض لصدمة كهربية أو نشوب حريق.



علامات التنبيه المتعلقة بالاستخدام



عندما يعلق بالغسالة مادة غريبة، مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك. افصل قابس التيار الكهربي ونظّف الغسالة باستخدام قطعة قماش رطبة وناعمة.

· يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.

قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوى. ولذلك يجب الحرص عند استخدام الغسالة.

قد خَدث إصابة عندما ينكسر الزجاج.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم التزوّد بالماء. يجب فتح الصنبور ببطء يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

قد يؤدي ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسرب للماء.

في حالة حدوث خطأ بالتصريف أثناء التشغيل. خَقق من عدم وجود مشكلة تتعلق بالتصريف.

قد يؤدى استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق نتيجة تسرب كهربى.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.

قد يؤدي تعلق الملابس بالباب إلى تلف الملابس أو الغسالة. كما قد ينتج عنه حدوث تسرب للماء.

تأكد من إغلاق الصنبور في حالة عدم استخدام الغسالة.

تأكد من ربط مسمار وصلة خرطوم توريد الماء القلاووظ بإحكام.

قد يؤدى الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو حدوث إصابات.

تأكد من عدم التصاق أي مواد غريبة بالحاجز المطاطي والزجاج الأمامي للباب (على سبيل المثال. مخلفات أو خيوط أو شعر. وما إلى ذلك.)

في حالة تعلق مواد غريبة بالباب أو لم يكن الباب مغلقًا بالكامل، فقد يتسبب ذلك في تسرب الماء.

يجب فتح الصنبور والتحقق من إحكام وصلة خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.

في حالة عدم إحكام ربط المسامير أو وصلة خرطوم توريد الماء. قد يحدث تسريب للماء.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلى فقط.

يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة. لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung. كما أن شركة Samsung لا تتحمّل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء

معلومات السلامة ـــ٩

معلومات السلامة

يجب عدم الوقوف على الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو شموع مُضاءة أو سجائر مشتعلة أو أطباق أو مواد

قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

يجب عدم رش مواد متطايرة. مثل المبيدات الحشرية. فوق سطح الجهاز.

بالإضافة إلى أن هذا الأمريضر بالإنسان. فقد ينتج عنه أيضًا الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل

لا تضع شيئًا ينتج عنه مجال كهرومغناطيسي بالقرب من الغسالة.

قد ينتج عن هذا حدوث إصابات شخصية نتيجة وجود خلل في وظائف التشغيل.

نظرًا لأن الماء الذي يتم تصريفه أثناء الغسيل بدرجات حرارة عالية أو أثناء دورة التجفيف يكون ساخنًا. يجب عدم لمسه.

قد ينتج عن هذا الأمر حدوث حروق أو إصابات شخصية.

يجب عدم غسل مفروشات اللقاعد أو السجاد أو الأقمشة (*) القاومة للماء أو عصرها أو جُفيفها ما لم يكن جهازك يتضمن برنامحًا خاصًا لغسلها.

- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.
- قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.
- المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الخفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات. وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة جسدية نتيجة لتسرب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التجفيف أو بعدها مباشرةً؛ حيث يكون ساخنًا.

قد ينتج عن هذا الأمر الإصابة بحروق.

لا تضع يدك في درج المسحوق بعد فتحه.

- قد ينتج عن هذا إصابات شخصية حيث يمكن إصابة يديك بواسطة جهاز إدخال المسحوق. بجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس داخل الغسالة.
 - قد يؤدي هذا الأمر إلى تلف الغسالة أو حدوث إصابة ووفاة في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة. مثل المسامير أو السكاكين أو الأظافر. وما إلى ذلك.

قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي ختوي على زيوت أو كرمات أو مستحضرات سائلة، والتي توجد في متاجر المستحضرات الجلدية أو عيادات التدليك عادةً.

قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسرب الماء.

يجب عدم ترك أي أشياء معدنية. مثل الدبابيس أو دبابيس الشعر أو مواد التبييض. في الحوض لفترات طويلة من الوقت.

- قد يؤدى هذا الأمر إلى صدأ الحوض.
- وفي حالة بدء ظهور الصدأ على سطح الحوض. قم بتنظيف سطحه باستخدام سائل تنظيف (متعادل) وإسفنج في تنظيفه. ولا تستخدم فرشاة معدنية مطلقًا.

لا تستخدم سائل تنظيف جاف بشكل مباشر. ولا تغسل الملابس أو تشطفها أو جَففها في حالة إضافة مسحوق تنظيف جاف

قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناجّة عن تأكسد الزبت.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

١٠ _ معلومات السلامة

لا تستخدم صابون غسل يدين متعادل بالغسالة.

- ففي حالة التراكم والتصلب داخل الغسالة. قد حُدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.

لا تغسل عناصر الغسيل كبيرة الحجم. مثل المفروشات. في شبكة الغسيل.

- مكنك وضع الجوارب وحمالات الصدر في شبكة الغسيل وغسلها مع بقية ملابس الغسيل.
 - يؤدي التقصير في الالتزام بهذا الأمر إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل متيبس.

- قد يحدث تسرب للماء في حالة تراكم هذا المسحوق المتيبس داخل الغسالة.

بالنسبة للغسالات ذات فتحات تهوية بقاعدتها. تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

تأكد من إفراغ جميع جيوب الملابس التي سيتم غسلها.

- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزوّدة بإيزمات أو أزرار كبيرة الحجم أو أشياء معدنية أخرى ثقيلة الوزن بالغسالة.



🛕 علامات التحذير الصارمة المتعلقة بالتنظيف

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً. لا تقم باستخدام منظف يحتوي على حمض قوي.



لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.

قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- حيث قد يؤدي عدم الالتزام بذلك إلى التعرّض لصدمة كهربية أو نشوب حريق.

معلومات السلامة __١١

المحتويات


فحص الأجزاء ۱۳ اعداد الغسالة استيفاء متطلبات التركيب مصدر الطاقة الكهربية والتوصيل بطرف أرضى ١٤ تزويد الغسالة بالماء ١٤ التصريف التثبيت الأرضى درجة الحرارة المحيطة ۱۵ تركيب القنطرة أو الخزانة ۱۵ تركيب الغسالة 10 الغسىل للمرة الأولى ٢1 غسل اللابس إرشادات أساسية ۲۱ استخدام لوحة التحكم ٢٢ العرض صديق البيئة (طرازات LCD محددة) Child Lock (التأمين ضد عبث الأطفال) ۲۵ Sound off (إيقاف تشغيل الصوت) Delay End (تأجيل التوقف) My cycle (الدورة المفضلة) ٢٦ Eco Bubble (الفقاعات صديقة البيئة) ٢v غسل الملابس باستخدام قرص خديد الدورة غسل الملابس يدويًا إرشادات الغسيل معلومات حول مسحوق الغسيل والمواد الإضافية مسحوق الغسيل الذي يمكن استخدامه ۳. ۳۱ درج مسحوق الغسيل المنظف السائل (متوفر بطرازات محددة) ۳١ تنظيف الحاوية صديق البيئة تنظيف الغسالة وصيانتها تصريف الماء من الغسالة عند الطوارئ تنظيف مصفاة الخلفات ٤٣ تنظيف الأسطح الخارجية ٤٣ تنظيف درج مسحوق الغسيل والجزء الداخلي منه ۳۵ تنظيف المصفاة الشبكية المتصلة بخرطوم ألماء ٣٦ إصلاح غسالة متجمدة تخزين الغسالة ٣٦ خَقق ما يلى إذا كانت الغسالة... ۳۷ استكشاف الشاكل وحلها ورموز العلومات رموز المعلومات ٣٨ وضع المعايرة معايرة الغسالة ٣٩ جدول الدورات جدول الدورات جدول العناية بالأقمشة الملحق حماية البيئة ٤٠ ٤٠ بيان التوافق المواصفات

إعداد الغسالة

تأكد من اتّباع فني التركيب لهذه الإرشادات بدقة حتى تعمل غسالتك الجديدة بشكل صحيح ولتجنب مخاطر التعرّض للإصابة عند الغسيل.

فحص الأجزاء

أخرج الغسالة بحرص من صندوقها وتأكد من وجود كافة الأجزاء الوضحة أنناه. في حالة تلف الغسالة أثناء عملية الشحن أو عدم استلامك لكافة الأجزاء. اتصل بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

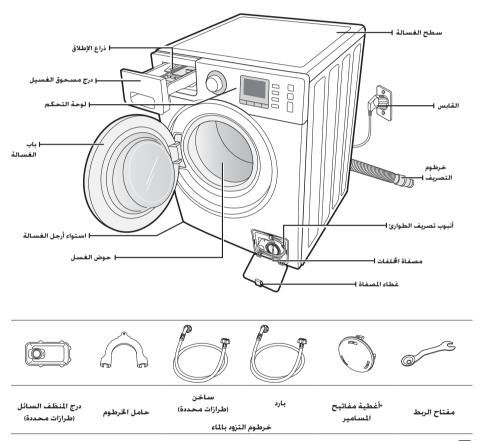



إعداد الغسالة

استبفاء متطلبات التركبب

مصدر الطاقة الكهربية والتوصيل بطرف أرضى



🚹 منوع استخدام كبلات إضافية.

غنبر استخدم سلك التيار الكهربي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب. تأكد أن مصدر التيار الكهربي يتوفر فيه:

- قاطع دائرة كهربية أو منصهر بقدرة ٢١٠-٢٤٦ فولط من تيار متردد / ٥٠ هرتز
 - دائرة كهربية فرعية منفصلة تخدم تشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي. وفي حالة حدوث خلل أو تعطل في الأداء. يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية. وذلك بتوفير مسار لأقل مقاومة للتيار الكهربي.

يتم تزويد الغسالة بسلك تيار كهربي به قابس طرف أرضي بثلاثة سنون لاستخدامه في مأخذ أرضي تم تركيبه بشكل صحيح.



🕊 🖟 لا تقم مطلقًا بتوصيل السلك الأرضى بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى التعرّض لصدمة كهربائية. استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضى للغسالة. ويُحظر تعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع مخرَج التيار. استعن بفني كهرباء مؤهلاً لتركيب مأخذ مناسب.

تزويد الغسالة بالماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء من ٥٠ إلى ٨٠٠ كيلو باسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء بما لا يسمح بإغلاقه بالكامل. أو قد تستغرق الغسالة وقدًا أطول بما تسمح به عناصر التحكم لملئها بالماء. ما ينتج عنه إيقاف تشغيل الغسالة. (يتم تضمين نظام خُديد وقت ملء الغسالة في عناصر التحكم والذي ثم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)

يجب أن تكون صنابير الماء على بُعد ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.



🎉 🏿 تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء على مختلف أطوالها التي تصل حتى ٣٠٥ سم.

- مكنك تقليل مخاطر تسرب الماء أو تعرّضه للتلوث عن طريق:
 - تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة. الفحص الدوري للتأكد من عدم تسرب الماء من جَهيزات خراطيم توريد الماء.



🗥 افحص جميع التوصيلات بصمام وصنابير الماء للتحقق من عدم وجود أي تسريب قبل استخدام الغسالة للمرة الأولى.

٤١ __ إعداد الغسالة

التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ١٥ سم. ويجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى الجاه الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لتسمح بإدخال القطر الخارجي لخرطوم التصريف. الذي يقوم المصنّع بإرفاقه.

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء، وقد ختاج الأسطح الخشبية إلى تقوية لتقليل الاهتزاز و/ أو الأحمال غير المتوازنة. تكون طريقة بسط السجاد على الأرضيات بالإضافة إلى أسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية خرك الغسالة بشكل طفيف أثناء دورة العصر.

لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة الحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء. حيث إن الغسالة خُتفظ دومًا ببعض الماء في صمام الماء والمضخة ومناطق من الخرطوم، حيث قد يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالسيور والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم. يجب توفير الحد الأدنى من الفراغات حولها كما يلى:

الجوانب ــــــــ 10 م

الجزء العلوي ــ ١٥ م الواجهة ــ ٤٦٥ م

في حالة تركيب الغسالة والجفف معًا. يجب أن يحتوي الجزء العلوي للقنطرة أو الخزانة على فتحة هواء غير مسدودة مساحتها ٤٦٥ م على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ا

اختيار مكان الغسالة



- سطح صلب ومستو دون وجود سجاد أو أرضية قد تعوق عملية التهوية
 - · مكان بعيد عن أشعة الشمس المباشرة
 - تهوية كافية
 - · لا يصل إلى مرحلة التجمد (أقل من · درجة مئوية)
 - · يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك التيار الكهربي

إعداد الغسالة

الخطوة رقم ا

فك مسامير الشحن

قبل تركيب الغسالة. يجب إزالة جميع مسامير الشحن من اللوحة الخلفية للجهاز.

قم بفك جميع المسامير بواسطة مفتاح الصواميل المرفق مع الجهاز.



 أ. امسك الصواميل بواسطة مفتاح الصواميل واسحبها من خلال الجزء العريض للفتحة. كرر ذلك مع كل مسمار.



٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.



قم بحفظ مسامير الشحن في مكان بعيد آمن. فقد ختاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

↑ فد تشكّل مواد التعبئة خطرًا على الأطفال. ولذا. احتفظ بجميع مواد التعبئة (الأكباس البلاستيكية والواد للصنوعة من مادة غنير البوليستيرين. وغيرها من الواد) بعيدًا عن متناول أيدي الأطفال.

الخطوة رقم ٣

ضبط قائم استواء الغسالة



- 🕊 عند تركيب الغسالة. تأكد من توصيل قابس التيار الكهربي وخرطوم التزوّد بالماء وخرطوم التصريف بسهولة.
 - ضع الغسالة في المكان المناسب.
 - اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.



٣. عند استواء الغسالة. أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع




الخطوة رقم ٤

توصيل خرطوم التزود بالماء والتصريف

توصيل خرطوم التزود بالماء

- استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد وقم بتوصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
- يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة والطرف الآخر للخرطوم بصنبور الماء. مع مراعاة عدم جعل الخرطوم مشدودًا. إذا كان الخرطوم قصيرًا جدًا. استبدل به خرطومًا أطول يتحمل الضغط العالى.
- قم بتوصيل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. مكنك، إذا لزم الأمر. إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

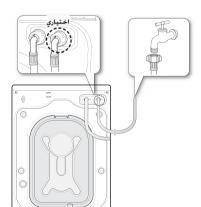

بالنسبة للطَّرز الحددة المزودة بمدخل إضافي للتزود بالماء الساخن:


- الستخدم مثبت الذراع الذي على شكل لا الأحمر الخاص بخرطوم توريد الماء الساخن وقم بتوصيلة بمدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.
 - قم بتوصيل الطّرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.
 - استخدم خرطوم على شكل Y إذا أردت استخدام الماء البارد فقط.

إعداد الغسالة ـــ٧١


إعداد الغسالة

توصيل خرطوم التزود بالماء

قم بفك الحول من خرطوم توريد الماء.




 أولاً, باستخدام مفك براغى من نوع "+". قم بفك المسامير الأربعة الموجودة بالحول. ثم أخرج الحُوّل، وقم بلف الجزء رقم (١) باجّاه السهم حتى تكون هناك مسافة مقدارها ٥



٣. قم بتوصيل الحوّل بصنبور الماء عن طريق ربط المسامير القلاووظ بإحكام أثناء رفع الحول لأعلى.


اجعل الجزء (١) بالجاه السهم ووصل الجزء (١) و(١).




 وصل خرطوم التزود بالماء بالحول. عند إرخاء الجزء (١٣). يتصل الخرطوم بالحول تلقائياً محدثاً صوت "نقرة".





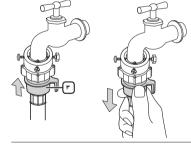


 قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في الجّاه عقارب الساعة حد النهاية.

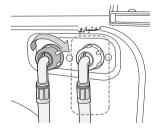

 قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو الحقل. قم بتكرار الخطوات السابقة في حالة تسريب الماء.





إذا كان صنبور الماء من النوع القلاووظ. قم بتوصيل خرطوم توريد الماء إلى الصنبور كما هو موضح.





ا ستخدم صنبورًا من النوع التقليدي جدًا لتوريد الماء. إذا كان الصنبور مربعًا أو كبيرًا جدًا. أزل الحلقة الفاصلة قبل إدخال الصنبور • في الحوال.

توصيل خرطوم المياه (طرازات محددة)

ثم تصميم خرطوم الياه للحماية المتكاملة من التسرب. ويتم توصيله بخرطوم توريد المياه وسيعمل على إيقاف تدفق المياه تلقائبًا في حالة تلف الخرطوم، كما يتم عرض مؤشر خّذير.

قم بتوصیل خرطوم تزوید الماء بصنبور الماء کما هو موضح.




اعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع طرف خرطوم التصريف بثلاث طرق:

- فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ١٠ و٩٠ سم. وللحفاظ على انثناء خرطوم التصريف, استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الموجه على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع حركة خرطوم التصريف.
- في فرع أنبوب تصريف الخوض: يجب أن يكون فرع أنبوب التصريف فوق سباكة الخوض بحيث يكون طرف الخرطوم على ارتفاع ١٠ سم على الأقل عن الأرض.



- **في أنبوب تصريف**: نوصي باستخدام أنبوب عمودي بارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.
 - الماسورة الرأسية ما يلي; الماسورة الرأسية ما يلي; • قطريبلغ ۵ سم بحد أدنى.
 - سعة جرف تبلغ ٦٠ لترًا في الدقيقة بحد أدني.



الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربائي بحيث يكون منفذ تيار كهربائي معتمد وبقدرة من ٢٢٠ إلى ٤٢٠ فولط تيار متردد و٥٠ هرتز محمي بصمام كهربائي أو قاطع دائرة كهربائية بماثل له. (لزيد من المعلومات حول متطلبات التوصيل الكهربائي والأرضى. راجع صفحة رقم ١٤.)

اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة Rinse+Spin (شطف+جَفيف) بعد الانتهاء من التركيب.

الخطوة رقم 1

خديد اللغة (طرازات LCD محددة)

تظهر رسالة "إعداد اللغة" (بعد التشغيل) في بدابة الإعداد, وبالتالي يمكنك خديد لغة من بين الإنجليزية أو الفرنسية أو الهولندية أو الألمانية أو الإيطالية أو الأسبانية. (البولندية أو الروسية أو التركية أو الصينية أو التايلاندية.)

- * قد تتغير خديدات اللغات وفقًا للطراز.
- اضغط الزر Rinse (شطف) لاختيار لغة.
- اضغط الزر Spin (تنشيف) لتعيين اللغة الختارة.







٢٠ _ إعداد الغسالة

غسل الملابس

يتمثل أصعب أمر عند استخدام الغسالة الجديدة من Samsung في خديد الأشياء التي يجب غسلها أولاً.

الغسل للمرة الأولى




آفیل غسل الملابس للمرة الأولى. یجب تشغیل الجهاز دورة کاملة (من دون ملابس).

- اضغط الزر Power (تشغيل).
- أضف كمية قليلة من مسحوق الغسيل في الجزء الخصص له 🗓 في درج المسحوق
 - قم بتشغيل توريد الماء المتصل بالغسالة.
 - اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت).



يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة بعد التشغيل الاختبارى الذي قامت به الشركة المصنّعه للغسالة.

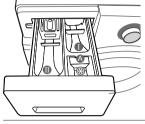

الدرج []: مسحوق للغسل الأولى أو نشا.

الدرج 🕼: مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.

قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع الصفحة ٣١ بدليل الطراز المماثل). لا تضف مسحوق تنظيف بدرج المنظّف السائل.

الدرج (@: المواد الإضافية, مثل مكون أو منعم الأقمشة (املأ الدرج بحيث لا تتجاوز الحافة السلفية (الحد الأقصى) العلامة "A").

إرشادات أساسية


قم بوضع الملابس في الغسالة.



🗥 لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها. راجع الجدول الموجود في صفحة رقم ٣٠.

- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدى ذلك إلى تسرب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي. لأن ذلك قد يتسبب في تسرب الماء.
 - احذر لمس الباب الزجاجي عندما تكون الغسالة قيد التشغيل أو لأنها قد تكون ساخنة.
 - احذر فتح درج مسحوق الغسيل أو مصفاة الخلفات عندما تكون الغسالة قيد التشغيل حتى لا تتعرض للماء أو البخار
 - احذر غسل العناصر المقاومة للماء باستخدام الدورة العادية فيما عدا برنامج العناية بملابس الخروج.
 - أغلق الباب حتى يثبت.
 - قم بتشغيل الغسالة.
 - أضف المسحوق والمواد الإضافية إلى درج التوزيع.
 - حدد الدورة والخيارات المناسبة لكمية الملابس التي تمت إضافتها. سيضىء مؤشر الغسل وسيظهر وقت الدورة الحدد على لوحة العرض.
 - اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت).

استخدام لوحة التحكم

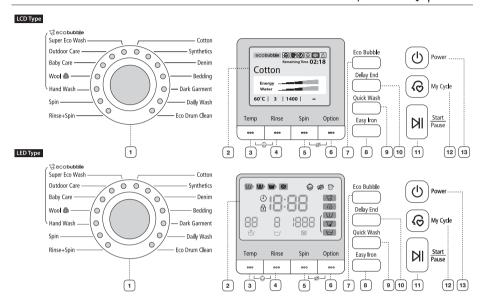

خديد نوع التدوير وسرعة التنشيف للدورة.

🎉 لمزيد من المعلومات. راجع "غسل الملابس باستخدام قرص تحديد الدورة". (راجع صفحة ١٦٨)

والملابس الداخلية والمناشف والقمصان. وما إلى ذلك. Synthetics (ألياف صناعية) - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى.

Denim (الجينز) - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في الملابس.

Bedding (مفروشات) - لغطاء السرير وملاءات وأغطية الفراش. وما إلى ذلك.

المنافع المنافع

Dark Garment (ملابس داكنة) - تضمن دورات الشطف الإضافية والتنشيف منخفض السرعة غسل ملابسك الداكنة المفضلة بلطف وشطفها جيدًا.

Daily Wash (غسيل يومي) - للملابس التي تستخدم يوميًا مثل الملابس الداخلية والقمصان. Eco Drum Clean (تنظيف الحاوية صديق البيئة) - لتنظيف الحاوية. لتنظيف الحاوية من الأتربة والبكتيريا. ويُوصى تشغيله بانتظام (بعد كل ٤٠ دورة غسيل). دون منظّف أو مبيّض.

الدورة Super Eco Wash (غسل متميز صديق البيئة) - تقوم Eco Bubble (الفقاعات صديقة البيئة) ذات درجة الحرارة المنخفضة بضمان خقيق أفضل نتائج للغسيل بينما تقوم بتوفير الطاقة بشكل

Outdoor Wear (ملابس الخروج) - للغسيل الخارجي مثل ملابس تسلق الجبال

وملابس التزحلق والملابس الرياضية. إلى جانب توفر لمسات المعالجة الفعّالة للمنسوجات والألياف مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة.

Baby Care (العناية مالبس الأطفال) - تضمن درجات حرارة الغسل العالية ودورات الشطف الإضافية عدم وجود بقايا لمسحوق الغسيل في الملابس رفيعة السمك.

CYCLE SELECTOR (قرص خديد الدورة)

٢٢ غسل الملابس

Wool (صوف) - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن اكجم. تتم دورة غسيل wool (الصوف) باستخدام عملية الاهتزاز الخفيف. وأثناء عملية الغسيل. تستمر عمليتا الاهتزاز الخفيف والنقع لحماية الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. ولا تعد عملية التوقف هذه مشكلة. يُنصح باستخدام مسحوق تنظيف عادى لدورة اWool (الصوف). وذلك للحصول على نتائج غسل رائعة ولعناية فائقة بالألياف الصوفية. تم اعتماد دورة غسيل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسل منتجِات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسل المنتجات وفقاً للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة, M1108 (الرقم المعتمد الصادر من I.W.S. Nominee Hand Wash (غسل يدوي) - دورة غسل بسيطة كما لو كنت تغسل الملابس باليدين. Spin (تنشيف) - إجراء دورة عصر إضافية لإزالة المزيد من الماء. Rinse + Spin (شُطَف + تَنشيف) - للملابس التي خَتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي تتم إضافته أثناء الشطف. شاشة عرض LCD / لوحة عرض تعرض الوقت المتبقى لدورة الغسل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ. رسومية رقمية اضغط هذا الزربشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتاحة: (ماء بارد 🖑و١٠ و٢٠ و٤٠ و١٠ زر خدید TEMP (درجة الحرارة) و٩٥ درجة مئوية). اضغط هذا الزر لإضافة دورات شطف إضافية. علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات. ٤ (رتحديد RINSE (شيطف) اضغط على هذا الزر بشكل متكرر للتبديل بين سرعات دورة العصر المتاحة. 🖵 و 🎘 و20 و40 و100 و110 و120 دورة في الدقيقة WF1124 ۵ (ر التحديد SPIN (تنشيف) "No spin (بدون تنشيف) 🕮 - تبقى الملابس في الحاوية دون تشغيل دورة العصر بعد تصريف الماء "Rinse Hold (انتظار الشطف) √ " - يبقى الغسيل منقوعًا بالماء في عملية الشطف الأخيرة. يجب تشغيل دورة Drain (تصريف) أو Spin (تنشيف) قبل أن تتمكن من إخراج الملابس. اضغط على هذا الزربشكل متكرر للتبديل بين الخيارات التالية: Soak + Intensive ← (غسل أولى) ← (غسل أولى) Prewash (نقع + مكثف) → Soak + Intensive (نقع + مكثف) Soak + Prewash (نقع + غسل أولي) ← Intensive + Prewash (مكثف + غسل أولى) ← Soak + Intensive + Prewash (نقع ً + مكثف + غسل أولي) ← off (إيقاف التشغيل) "Prewash (غسل أولي) / 1 / ": اضغط على هذا الزر لتحديد غسل أولي. حيث تتوفر ميزة Pre-wash (غسل أوليّ مع الدورات التالية فقط: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي) و Super Eco Wash (غسـل متميز صديق البيئة) و Baby Care (العناية مِلابس الأطفال). "Soak (نقع) / ": استخدم هذا الخيار لإزالة البقع من الغسيل بفعالية عن طريق نقعه. رر التحديد OPTION (خيارات) يتم إجراء وظيفة النقع لمدة ١٣ دقيقة في دورة الغسل. تستمر وظيفة النقع لمدة ٣٠ دقيقة من خلال ست دورات, حيث تستمر كل دورة نقع لمدة دقيقة واحدة ثم تقف لمدة ٤ دقائق. تتاح وظيفة النقع مع برامج الغسل التالية فقط: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Daily Wash (غسل يومي) و Super Eco Wash (غسل متميز صديق البيئة) و Baby Care (العناية بملابس الأطفال). "Intensive (مكثف) آيَدٌ ": اضغط هذا الزر مع الملابس المتسخة بشدة والتي ختاج إلى الغسل بكثافة. تتم زيادة مدة الدورة لكل الدورات.

غسل الملابس

يتم تشغيل خديد Bubble (الفقاعات صديقة البيئة) بشكل افتراضي. اضغط على زر الخيار Eco Bubble (الفقاعات صديقة البيئة) مرة واحدة لإلغاء التحديد و Bubble (ايقاف تشغيل). Bubble Generator OFF (إيقاف تشغيل). Bubble Generator OFF (الموضح باللوحة). ثم اضغط عليه مرة أخرى لتعيين الوظيفة إلى ON (تشغيل). • بعض دورات الغسيل يكون بها الخيار Eco Bubble (الفقاعات صديقة البيئة) معيناً إلى ON (تشغيل) (سيتم توضيح ذلك باللوحة. ويتم تشغيل "المولّد" تلقائيًا). • لا ختاج دورات الغسل الأخرى لهذا الخيار وتقوم "بإيقاف تشغيل المولّد" تلقائيًا. • يكنك ضبط هذا الخيار يدويًا مع العديد من الدورات، عا يؤثر على وقت الغسل بشكل واضح على اللوحة لتحقيق النتائج المطلوبة (لمزيد من العوامات الرجاء مراجعة صفحة ١٧).	زر خديد ECO BUBBLE (خديد V
اضغط هذا الزر لتحضير لللابس بحيث يمكن كتها بسهولة عن طريق تقليل الخيوط الملتفة أثناء دورة التجفيف. • تتوفر وظيفة Easy Iron (كي سهل) مع برامج الغسيل التالية فقط: Cotton (قطن) و • كان Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dally Wash (ملابس داكنة) و Dally Wash (غسل يومي) و Super Eco Wash (مسلام متميز صديق البيئة) و Baby Care (العناية بملابس الأطفال) • عند قديد وظيفة Easy Iron (كي سهل). يمكنك ضبط سرعة دورة الغسل حتى ١٠٠٠ دورة في الدقيقة. (إذا قمت بتحديد وظيفة Lasy Iron (كي سهل) مع ضبط سرعة دورة التجفيف أعلى من ١٠٠٠ دورة فقط)	زر څدید EASY IRON (کي سهل)
لغسل الملابس خفيفة الانساخ والغسيل الأقل من ٢ كجم التي ختاجها بسرعة. يستغرق هذا البرنامج حوالي ١٥ دقيقة كحد أدنى. ولكن قد بختلف من القيم الموضحة حسب ضغط المياه وعسر المياه ودرجة حرارة التزويد بالمياه ودرجة حرارة الغرفة ونوع الغسبل وكميته ودرجة الانساخ والمسحوق المستخدم للملابس الغير منزنة وحدوث انقطاع النيار الكهربائي والخيارات الإضافية المحددة. • اضغط على هذا الزربشكل متكرر لاحتيار وقت الدورة: ١٥ دقيقة ← ٠٠ دقيقة ← ٠٠ دقيقة ← ٠٠ دقيقة ← ٠٠ دقيقة ← ١٠ دقي	زر قدید QUICK WASH زر غسل سریع)
اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات ميزة Delay End (تأجيل التوقف) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.	زر قدید DELAY END (تأجیل التوقف)
اضغط لايقاف الدورة مؤقتاً وإعادة تشغيلها.	زر قدید START/PAUSE زر قدید (تشغیل/إیقاف مؤقت)
اختر الدورة المفضلة لديك بما في ذلك درجة الحرارة والتنشيف ومستوى الاتساخ والخيار. وما إلى ذلك.	زر قديد MY CYCLE زر قديد (الدورة المفضلة)
اضغط هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دفائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائيًا.	۱۳ الزر POWER (تشغيل)

12_ غسل الملابس

العرض صديق البيئة (طرازات LCD محددة)

تعمل هذه الوظيفة على تقليل درجة سطوع إضاءة خلفية شاشة LCD في حالة عدم استخدام Cycle Selector (قرص حديد الدورة) أو الضغط على أي من الأزرار لفترة من الوقت تم خديدها مسبقًا.

آلية التشغيل

إذا قمت بالضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). يتم تشغيل وظيفة Eco Display (العرض صديق البيئة) بعد دقيقة

وفي حالة استخدام Cycle Selector (قرص خديد الدورة). يتم إلغاء وظيفة Eco Display (العرض صديق البيئة).

ستعمل وظيفة Eco Display (العرض صديق البيئة) تلقائيًا ما لم يتم استخدام Cycle Selector (قرص خديد الدورة) أو يتم الضغط على زر خلال دقيقة واحدة.



لان تعمل وظيفة Eco Display (العرض صديق البيئة) ما لم يتم الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

Child Lock (التأمين ضد عبث الأطفال)

تمكِّنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسل التي قمت

(التنشيط /الغاء التنشيط) Activating/Deactivating

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) أو عدم تشغيلها. اضغط الزرين Temp (درجة الحرارة) و Rinse (شيطف) في وقت واحد لمدة ٣ ثوان. يضيء مؤشر "Child Lock (التأمين ضد عبث الأطفال) 🚭 " عند تشغيل هذه الميزة.






Sound off (إيقاف تشغيل الصوت)

بكن خديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند خديد هذه الوظيفة, يتم إيقاف تشغيل الصوت لجميع الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر. لا يتغير الإعداد الذي تم اختياره.

(التنشيط /الغاء التنشيط) Activating/Deactivating

إذا كنت تريد تشغيل وظيفة Sound Off (إيقاف تشغيل الصوت). اضغط الزرين Spin (تنشيف) و Option (خيارات) في نفس الوقت لمدة ٣ ثوان. سيضيء رمز "Sound Off" (إيقاف تشغيل الصوت) الله" عند تشغيل هذه الميزة.

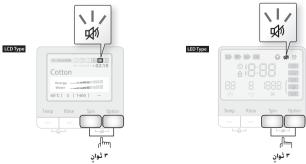

غسل الملابس

Delay End (تأجيل التوقف)

يكنك ضبط الغسالة لإجراء عملية الغسل تلقائبًا في وقت لاحق عن طريق اختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة.(بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

- م كنك ضبط الغسالة تلقائيًا أو يدويًا حسب نوع الملابس التي تريد غسلها.
- اضغط الزر Delay End (تأجيل التوقف) بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب.
- ٣. اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت). يضيء مؤشر "Delay End" (تأجيل التوقف)√", وتبدأ الساعة بالعد التنازلي
 حتى تبلغ الوقت الحدد.
 - لإلغاء وظيفة Delay End (تأجيل التوقف). اضغط الزر Power (تشغيل) ثم قم بتشغيل الغسالة من جديد.

My cycle (الدورة المفضلة)

يتيح لك إمكانية تنشيط الغسل الاعتيادي (درجة الحرارة والتنشيف ومستوى الاتساخ وغيرها) بالضغط على زر مناسب واحد. عند الضغط على الزر My Cycle (الدورة المفضلة). يتم استخدام زر My Cycle (الدورة المفضلة) لتحميل واستخدام خيارات My Cycle (الدورة المفضلة) التي تم حفظها. ستشير إضاءة "My Cycle (الدورة المفضلة)" إلى أن الدورة قيد التشغيل. كما ستومض الاضاءة الخاصة بالخيارات والدورة الختارة.

مكنك تعيين كافة الخيارات كما يلى بالوضع My Cycle (الدورة المفضلة).

- افتح مصدر تورید الماء.
- ا. اضغط الزر Power (تشغيل).
- حدد الدورة باستخدام Cycle Selector (قرص محديد الدورة).
 - بعد اختيار الدورة، قم بضبط كل خيار.
- راجع "جدول الدورات" الموجود بالصفحة ٢٩ للتعرف على إعدادات الخيارات المتوفرة بكل دورة.
- أ. ثم يمكنك تخزين الدورة والخيارات المحددة بواسطة الضغط باستمرار على الزر My Cycle (الدورة المفضلة) لمدة أكثر من ٣ ثوان بالوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدها في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).
 - يكنك تغيير إعدادات My Cycle (الدورة المضلة) بواسطة تكرار العملية نفسها المذكورة أعلاه.
 يتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).
- في حالة الضغط على زر My Cycle (الدورة المفضلة) ثم تركه لمدة ٣ ثوان. يتم ظهور الدورة والخيارات السابقة التي تم حفظها. إذا من المناطقة التي المناطقة التي المناطقة التي ويومض المناطقة الدورة والخيارات المعينة حاليًا ويومض من الدورة والخيارات المعينة حاليًا ويومض مؤشر LED لمدة ٣ ثوان.

Eco Bubble (الفقاعات صديقة البيئة)

تسمح ميزة "الفقاعات صديقة البيئة" بتوزيع المسحوق بالتساوى وتخلل الأنسجة بشكل أسرع وأعمق.

تتوفر وظبفة الفقاعات بكافة الدورات ماعدا دورة Eco Drum Clean (تنظيف الحاوية صديق البيئة) ومعدل التشغيل المتاح للوظيفة كما يلي:

إلغاء وظيفة الفقاعات	وظيفة الفقاعات	الدورة
متوفرة	متعفرة	Octton (قطن) و Synthetics (ألياف صناعية) و Bedding (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي)
غير متوفرة	منوسره	Super Eco Wash (غسل متميز صديق البينة) و Outdoor Wear (ملابس الخروج) و Baby Care (العناية بلابس الأطفال) و Wool (صوف) و Hand Wash (غسل يدوي)
	غير متوفرة	تنظيف الحاوية صديق البيئة

قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.



- ثم اضغط مرة أخرى لتحديد خيار الفقاعات.
 - افتح الباب، ضع الغسيل بداخل حوض الغسل ثم أغلق الباب. اضغط الزر Power (تشغيل).
 - حدد وظيفة.
- ضع كمية مناسبة من المسحوق ومنعم الأقمشة بداخل الحجيرة المناسبة وفقًا لكمية الملابس ثم قم بإغلاق الدرج.
- أضف كمية مناسبة من المسحوق بداخل حجيرة المسحوق 🕮 ثم أضف منعم الأقمشة إلى حجيرة المنعم ® الموجودة أسفل قاعدة منعم الأقمشة مباشرةً.(الحد أقصى) لـ "A").
- عند تحديد الدورة Prewash (غسل أولي). قم بإضافة المسحوق بداخل حجيرة الغسل الأولى 🛈.
 - لاستخدام المنظف السائل. اترك درج المنظف السائل بالقاعدة (راجع قسم"المنظف السائل" بصفحة ا٣).




الا تضف مسحوق تنظيف بدرج المنظّف السائل.

- اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت).
- اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) لبدء عملية الغسل.
 - يتم التعرف على كمية الغسيل تلقائيًا ويتم غسل الملابس.
- حالمًا يتم بدء عملية تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو خديدها.



- يتم توليد كمية كافية من الفقاعات بواسطة كمية محددة من المسحوق. الرجاء تنظيف مصفاة "الخلفات" باستمرار. يساعد التنظيف المستمر بتوليد فقاعات ذات فاعلية.
 - قد يتم امتصاص الفقاعات وتبدو ككمية صغيرة وفقًا للمسحوق والملابس.
- بالرغم من أنه يتم توليد الفقاعات مجرد بدء عملية الغسيل. فقد تستغرق دقائق عديدة للمستخدمين كي يتم



غسل الملابس ـــ٧٦

غسل الملابس

غسل الملابس باستخدام قرص حديد الدورة

تتبح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامح الغسل. تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

- افتح صنبور الماء.
- اضغُط الزر Power (تشغیل).
 - ٣. افتح الباب.
- ضع الملابس قطعة بقطعة في الحاوية دون ججاوز سعتها.
 - أغلق الباب.
- أضف مسحوق الغسيل ومنقم الأفمشة ومسحوق للغسل الأولي (إذا لزم الأمر) في الحجيرات المناسبة.
- تتوفر ميزة Pre-wash (غسل أولي) عند خديد الدورات: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مغروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسبل يومي) و

Super Eco Wash (غسل متميز صديق البيئة) و Baby Care (العناية جلابس الأطفال). وبعد الغسل الأولي ضروريًا فقط في حالة الانساخ الشديد للملابس.

- ٧. استخدم Cycle Selector (قرص قديد الدورة الناسبة وفقًا لنوع المادة: Oction (قطن) و Synthetics (ألياف صناعية) و pair (ملابس داكنة) Daily Wash (غسل يومي) و Super Eco Wash (غسل متميز صديق البيئة) و و Outdor Wash (غسل متميز صديق البيئة) و Outdor Wear (ملابس الخروج) و Baby Care (العناية بملابس الأطفال) و Wool (صوف) و Hand Wash (غسل يدوي). سيتم إضاءة المؤشرات المرتبطة على لوحة التحكم.
- أ. في هذا الوقت, يكنك التحكم في درجة حرارة الغسل وحجم الشطف وسرعة التنشيف ووقت التأجيل بالضغط على زر الخيار الناسب.
- اضغط الزر Start/Paus (تشغيل/إيقاف مؤقت) وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على لوحة العرض.

الخيار Pause (ايقاف مؤقت)

- من المكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسل.
- اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) لإلغاء قفل الباب.
- لا يمكن فتح الباب عندما تكون درجة حرارة الماء "عالية جدًا" أو مستوى الماء "عالى جدًا".
 - ا. اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

- بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.
 - افتح الباب.
 - أخرج اللابس.

٢٨ _ غسل الملابس

غسل الملابس يدويًا

مكنك غسل الملابس بدويًا دون استخدام Cycle Selector (قرص تحديد الدورة).

- افتح مصدر توريد الماء.
- اضغط على زر Power (تشغيل) الموجود بالغسالة.
 - افتح الباب.
- ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
 - أغلق الباب.
- أضف مسحوق الغسيل. وإذا لزم الأمر. أضف منعّم الأقمشة أو مسحوق للغسل الأولى في الحجيرات المناسبة.
 - اضغط الزر Temp (درجة الحرارة) لتحديد درجة الحرارة المطلوبة. (ماء بارد و٦٠ و٣٠ و٤٠ و٩٠ و٩٥ درجة مئوية)
 - اضغط الزر Rinse (شطف) لتحديد عدد دورات الشطف المطلوبة.
 - علمًا بأن الحد الأقصى لعدد دورات الشطف خمس دورات.
 - وتزداد مدة الغسل وفقًا لعدد الدورات.
 - اضغط الزر Spin (تنشيف) لتحديد سرعة التنشيف.(🏿 : No Spin (بدون تنشيف))
- ١٠. اضغط الزر Delay End (تأجيل التوقف) بشكل متكرر للتنقل بين خيارات Delay End (تأجيل التوقف) المتوفرة (من ٣ إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
 - اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت) وعندها ستبدأ دورة الغسالة.

إرشادات الغسيل

اتِّبع هذه التعليمات البسيطة للحصول على ملابس ذات نظافة فائقة وغسيل مثالي.



المار خقق دومًا من ملصق العناية الموجود بالملابس قبل غسلها.

قم بفرز الملابس وغسلها وفقًا للمعايير التالية:

- بطاقة العناية: قم بفرز الملابس وفصلها إلى أقطان وألياف مخلوطة وألياف صناعية وملابس حريرية وأصواف ورايون.
 - اللون: افصل الملابس البيضاء عن الملابس الملوّنة، واغسل الملابس الملونة الجديدة على حدة.
 - الحجم: يعمل وضع الملابس بمختلف أحجامها في غسلة واحدة على خسين عملية الغسل.
- رقة الملمس: اغسل الملابس الحساسة وحدها باستخدام الدورة Delicate (ملابس رقيقة) للملابس الصوفية والستائر والملابس الحريرية النقية والجديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. إذ قد تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة. مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق. في تلف الغسالة. لا تقم بغسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في اللابس في تلفها وتلف الحوض. اقلب الملابس التي بها أزرار أو الملابس المطرّزة قبل غسلها. وإذا تركت سحابات السراويل والسترات مفتوحة أثناء الغسل. فقد تتسبب في تلف سلة العصر. يجب إغلاق السحابات وتثبيتها بخيط قبل الغسا

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولى للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة أفضل نتائج لعمليات الغسل, ومن ثم فهي موفرة للطاقة والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ. استخدم prewash (غسل أولي) مع مسحوق الغسيل الذي يستند إلى البروتين.

غسل الملابس

غديد السعة المناسبة

لا تتجاوز الوزن الحُدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة التحميل لنوع الملابس التي تقوم بغسلها.

السعة المناسبة	نوع القماش
WF1124	الطراز
۱۱۰ کجم	Cotton (قطن) - متوسط/خفيف الاتساخ - شديد الاتساخ
۵٫۰ کجم	Synthetics (ألياف صناعية)
۳ کجم	Denim (الجينز)
۵٫۱ کجم	Bedding (المفروشيات)
ا كجم	Outdoor Wear (ملابس الخروج)
ا كجم	Wool (صوف)




- في حالة عدم توازن الملابس ("يضيء UE" على الشاشة), وفي هذه الحالة. أعد توزيع الملابس. حيث يؤدى عدم توازن الملابس إلى تقليل فعالية العصر.
- عند غسل "المفروشات" أو أغطية "اللحاف". قد تطول مدة الغسل أو تقل فعالية عملية التنشيف.
 - · بالنسبة إلى "المفروشات" أو أغطية "اللحاف"، يوصى بأن تكون الحمولة ١٫٥ كجم أو أقل.



المنافعة على المنافعة المن

- قد تنكسر الأجزاء العدنية الموجودة في حملات الصدر بما يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا
 يرجى وضعها داخل شبكة غسيل ناعمة.





معلومات حول مسحوق الغسيل والمواد الإضافية

مسحوق الغسيل الذي مكن استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف) والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دومًا مسحوق الغسيل ذي "الرغوة القليلة" مصمم خصيصًا للغسالات الأوتوماتيكية. اتبع توصيات الشركة المستعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقبًا أم لا في منطقتك, اتصل بالهيئة المسئولة عن الماء.

لا تستخدم منظمًا صلبًا أو خشبًا لأنه قد يتبقى في دورة الشطف. قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح أو يتسبب في إعاقة تدفق الماء.

٣٠_ غسل الملابس


درج مسحوق الغسيل

ختوى الغسالة على حجيرات منفصلة لتوزيع السحوق ومنعّم الأقمشة. قم بإضافة كافة البواد الإضافية الخاصة بتنظيف الللابس إلى الحجيرات المناسبة قبل بدء تشغيل الغسالة.

- الله عنه عند العسيل عندما تكون الغسالة قيد التشغيل؛ حيث قد تتعرض لماء أو بخار ساخن.
 - اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.
 - قم بإضافة الكمية الموصى بها من مسحوق الغسيل مباشرة في حجيرة المسحوق آ) قبل تشغيل الغسالة.
 - قم باستخدام درج المنظف السائل لوضع المنظف السائل (راجع قسم "المنظف قم باستحدرم عن السائل" للطراز المماثل).
 - لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.
 - قم بإضافة الكمية الموصى بها من منعّم الأقمشة في الحجيرة الخاصة بها ® إذا لزم الأمر. لا تتجاوز خط MAX FILL (الحد الأقصى للتعبئة) (🕼).











- لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم:
 - مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
 - المساحيق التي تكون على شكل كرة أو شبكة



جَنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

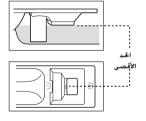

المنظف السائل (متوفر بطرازات محددة)

لاستخدام منظف سائل قم بوضع درج المنظف السائل بداخل القسم الرئيسي للغسيل الخاص بقاعدة المنظف ثم قم بصب المنظف السائل بالدرج الخاص به.

- ن بين. لا جَاوِز الله عن الخط MAX (الحد الأقصى). في حالة استعال في حالة استخدام مسحوق تنظيف. قم بإزالة درج المنظف السائل من قاعدة المنظف. لن يتم توزيع مسحوق التنظيف بواسطة درج المنظف السائل.
- قد يتبقى كمية من المنظف السائل بدرج المنظف بعد الانتهاء من الغسل.



تنظيف الغسالة وصيانته

يؤدى حفظ الغسالة نظيفة على خسين أدائها, وجنب الإصلاحات غير الضرورية, وزيادة عمر الغسالة.

تنظيف الحاوية صديق البيئة

تعد هذه الدورة دورة تنظيف ذاتى يتم من خلالها إزالة الأتربة التي قد تعلق بالغسالة من الداخل.

- اضغط الزر Power (تشغیل).
- قم بتدوير Cycle Selector (قرص حديد الدورة) إلى Eco Drum Clean (تنظيف الحاوية صديق البيئة).
- بكنك فقط استخدام الوظيفة Delay End (تأجيل التوقف).
 - يتم ضبط درجة حرارة المياه أثناء
- Eco Drum Clean (تنظيف الحاوية صديق البيئة) إلى ٧٠° سلزيوس.







- Dark Garment


- ٣. ضع الكمية المناسبة من المنظف في حجيرة المسحوق 🗓 وأغلق درج المسحوق (عند تنظيف الحاوية باستخدام سائل منظف).
 - تأكد من استخدام المنظف الموصى به لتنظيف الحاوية.
- يوجد نوعان من المنظفات؛ المسحوق والسائل. يتوفر المنظف السائل المستخدم فقط بدرج المنظف السائل (اختياري).
 - اضغط الزر Start/Pause (تشغيل/إيقاف مؤقت).
- تبدأ دورة Eco Drum Clean (تنظيف الحاوية صديق البيئة) عند الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).



- يمكنك تنظيف الحاوية بدون استخدام منظف بواسطة الدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة).
- لا تستخدم الدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة) أبدًا عند وجود ملابس داخل الغسالة. قد يتسبب ذلك في تلف النسيج أو حدوث مشكلة في الغسالة.
 - احذر استخدام المسحوق العادي بدورة Eco Drum Clean (تنظيف الحاوية صديق البيئة).
 - استخدم ١٠/١ فقط من كمية منظف الحاوية الموصى به من قبل الشركة المصتعة للمنظف.
 - تأكد من استخدام الأكسجين المبيض فقط. حيث إن استخدام الكلور المبيض قد يؤدي إلى تغيير اللون أو إزالته.
 - المنظف المسحوق: استخدم [المنظف المبيض المسحوق] أو [المنظف المستخدم لتنظيف الحاوية فقط].
 - المنظف السائل: استخدم [الأكسجين المبيض السائل] أو [المنظف المستخدم لتنظيف الحاوية فقط].

وظيفة التنبيه الآلي لتنظيف الحاوية صديق البيئة

- إذا كان المؤشر "ECO Drum Clean (تنظيف الحاوية صديق البيئة)" على لوحة العرض والمصباح الموجود على Cycle Selector (قرص حُديد الدورة) مضامٌ بعد عملية الغسل. يشير ذلك إلى ضرورة تنظيف الحوض (الحاوية). في هذه الحالة. قم بإخراج الغسيل من الغسالة. ثم قم بتشغيلها. وتنظيف الحاوية باستخدام ECO Drum Clean (تنظيف الحاوية صديق البيئة).
- إذا لم تقم بتشغيل دورة ECO Drum Clean (تنظيف الحاوية صديق البيئة). يتم إيقاف تشغيل مؤشر "ECO Drum Clean (تنظيف الحاوية صديق البيئة)" على لوحة العرض والمصباح الموجود على Cycle Selector (فرص حديد الدورة). وبالرغم من ذلك. يتم تشغيل مؤشر "ECO Drum Clean" (تنظيف الحاوية صديق البيئة)" على اللوحة والمصباح الموجود على Cycle Selector (فرص تحديد الدورة) مرة أخرى بعد دورتين من الغسيل. ومع ذلك. لا يؤدي الأمر إلى حدوث مشكلة في الغسالة.
- بعد دوربين من العسين، ومع دلت. م يودي الأمر إلى حدوك مسخته في العسالة. وعمومًا. فإن وظيفة "التنبيه الآلي لتنظيف الحاوية صديق البيئة" تظهر مرة في الشهر تقريبًا. قد يختلف تكرار التنبيه وفقًا لعدد مرات استخدام الغسالة.
- لمزيد من الاحتياط، الرجاء أيضًا تنظيف مصفاة الخلفات (راجع القسم "تنظيف مصفاة الخلفات" بصفحة ٣٤. وإلا قد ينخفض الأداء الخاص بوظيفة الفقاعات.

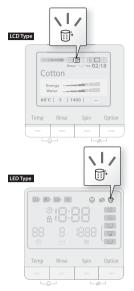




تصريف الماء من الغسالة عند الطوارئ

- قم بفصل الغسالة من مصدر الطاقة.
- افتح غطاء المصفاة بواسطة الضغط لأسفل وسحب المقبض الخاص به.



٣. افتح غطاء التصريف عند الطوارئ عن طريق سحبه.



- أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء.
 - اسمح بتدفق الماء بأكمله في وعاء.
 - لاً قد تتبقى مياه بكمية أكثر بما تتوقع. قم بتحضير وعاء أكبر.
 - . قم بإعادة إدخال غطاء التصريف عند الطوارئ وأنبوبة التصريف.
 - أعد غطاء المصفاة إلى مكانه.



تنظيف الغسالة وصيانتها ــ٣٣

تنظيف الغسالة وصيان


تنظيف مصفاة الخلفات

نوصي بتنظيف مصفاة الخلفات ٥ أو ٦ مرات في العام أو عند عرض رسالة الخطأ "٣٥". (راجع "تصريف الماء من الغسالة عند الطوارئ" في القسيم

إذا تم تراكم مواد خارجية بمصفاة الخلفات. يتم التقليل من أداء وظيفة الفقاعات.

🚹 قبل البدء بتنظيف مصفاة الخلفات, تأكد من فصل سلك التيار الكهربي.

قم بإزالة المياه المتبقية أولاً (راجع "تصريف الماء من الغسالة عند الطوارئ"



- افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
- "... أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
 - فك غطاء مصفاة الخلفات.



- اغسل أي أوساخ أو أي مواد أخرى عالقة في مصفاة الخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة الخلفات غير مسدودة.
 - ضع غطاء مصفاة الخلفات في مكانه.
 - ٧. ضع غطاء المصفاة في مكانه.




المنتح غطاء مصفاة الخلفات أثناء تشغيل الغسالة أو قد تتدفق المياه الساخنة للخارج.



- تأكد من استبدال غطاء المصفاة بعد تنظيف المصفاة. إذا كانت المصفاة بخارج الغسالة. قد يحدث خلل في وظائف تشغيل الغسالة أو تسرب للمياه.
 - ينبغى تركيب المصفاة جيدًا بعد الانتهاء من تنظيفها.

تنظيف الأسطح الخارجية


- ا. امسح الأسطح الخارجية لجهاز الغسالة. بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير
 - استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
 - ٣. لا تصب الماء على الغسالة.



٣٤_ تنظيف الغسالة وصيانتها

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

- اضغط على ذراع الإطلاق الموجود داخل درج مسحوق الغسيل واسحبه إلى الخارج.
- قم بإزالة الفاصل الخاص بالمنعم ودرج المنظف السائل (اختياري) من قاعدة المنظف.

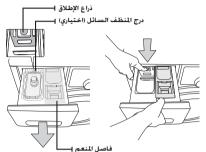

٣. اغسل كافة الأجزاء بالماء الجاري.



- نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
- استبدل الفاصل الخاص بالنعم ودرج النظف السائل (اختياري) بدفعه بقوة داخل القاعدة
 - أعد الدرج إلى مكانه.
- ٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبق.



تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل. أو عند ظهور رسالة خطأ "٤٤":

- أغلق مصدر توريد الماء إلى الغسالة.
- فك الخرطوم من الجانب الخلفي للغسالة. قم بتغطية الخرطوم بقطعة من القماش. لمنع تدفق الماء بسبب الضغط العالي في الخاطوم.
- ". اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف باستخدام زرادية واشطفها بالماء حتى تصبح نظيفة. نظف أيضًا الجزأين الداخلي والخارجي للوصلة الملفوفة.
 - أعد المصفاة إلى مكانهاً.
 - ثبت الخرطوم بالغسالة مرة أخرى.
 - تأكد أن الوصلات محكمة ولا تسرب الماء وقم بتشغيل الصنبور.

تنظيف الغسالة وصيانتها

إصلاح غسالة متجمدة

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وجمدت الغسالة:

- افصل الغسالة من مصدر التيار الكهربي.
- صب الماء الدافئ على صنبور الماء لفك خرطوم توريد الماء.
 - قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
- صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
- أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغى.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة. فمن المستحسن تصريف الماء منها وفصلها. قد نتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

- حدد دورة Cotton (قطن) ثم اضغط الزر Quick Wash (غسل سريع) وقم بتشغيل الغسالة من خلال الدورة دون خميل.
 - أغلق صنابير الماء وافصل خراطيم توريد الماء.
 - ٣. افصل الغسالة عن مأخذ التيار الكهربي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.
- في حالة قيامك بتخزين الغسالة في درجات حرارة حْت درجات التجمد. اترك فرصة خروج الماء المتبقي في الغسالة قبل

٣١_ تنظيف الغسالة وصيانتها

استكشاف المشاكل وحلها ورموز المعلومات

حّقق ما يلي إذا كانت الغسالة...

الشكلة	الحل
٠ الغسالة لا تعمل ٠ ٠	 تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. تأكد من إغلاق الباب بإحكام. تأكد من فتح صنبور (صنابير) مصدر الماء. تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافِ	 افتح الصنبور تمامًا. تأكد من أن خرطوم توريد الماء غير متجمد. فك ثنيات خراطيم توريد الماء. نظف المصفاة الموجودة على خرطوم توريد الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	 تأكد من تشغيل الغسالة بضغط ماء كاف. تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو خَدث صوبًا مرتفعًا	 تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مسطحة. اضبط أقدام الغسالة حتى تستقر على الأرضية. تأكد من فك مسامير الشحن. تأكد من عدم ملامسة الغسالة لأي شيء آخر. تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا تقم الغسالة بتصريف الماء منها و/أو لا تقم بعملية العصر	 فك الثنيات الموجودة في خرطوم التصريف. وجنب استخدام الخراطيم اللتوية. تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه.	 لا يمكن فتح الباب إلا بعد مرور ٣ دقائق على توقف الغسالة عن العمل أو فصل التيار الكهربي.

في حالة استمرار المشكلة. اتصل بمركز خدمة عملاء Samsung الحلي.

رموز المعلومات

في حالة تعرض الغسالة لأعطال. قد يظهر أحد رموز العلومات على لوحة العرض. في حالة حدوث ذلك. الرجاء التحقق من هذا الجدول ومحاولة إجراء الحلول المقترحة قبل الاتصال بخدمة العملاء.

الحل	رمز الكود
 تأكد من إغلاق الباب بإحكام. تأكد من أن الملابس غير عالفة بالباب. 	dE
تاكد أن صنبور نوريد الماء مفتوح. • خَفق من ضغط الماء. • قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.	4E
 نظف مصفاة الخلفات. تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء. 	5E
 وزن الملابس غير موزّع. أعدة توزيع الملابس بالغسالة. وفي حالة غسيل قطعة واحدة من الملابس. مثل برنس حمام أو جينز قد لا تكون نتيجة العصر النهائية مرضية. وتظهر رسالة خطأ "UE" في نافذة العرض. 	UE
• اتصل بركز خدمة ما بعد البيع.	cE/3E/Uc

بالنسبة للرموز التي لم تذكر أعلاه، أو إذا لم يعمل الحل المفترح على حل المشكلة. اتصل بركز خدمة Samsung أو الموزع الحلي المعتمد التابع لـ Samsung.

استكشاف المشاكل وحلها ورموز المعلومات ٢٧_

معايرة الغسالة

وضع المعايرة

تكتشف غسالة Samsung وزن الغسيل تلقائبًا. لاكتشاف الوزن بطريقة أفضل دقة, الرجاء تشغيل "وضع المعايرة" بعد التركيب. يتم تشغيل وضع المعايرة باتباع الخطوات أدناه.

- قم بإزالة الغسيل أو أي محتويات في الغسالة وقم بإيقاف تشغيلها.
- انه فط على الزرين Temp (درجة الحرارة) وDelay End (تأجيل التوقف) معًا. ثم اضغط على زر Power (تشغيل) أيضًا.
 بعد ذلك. قم بتشغيل الغسالة.
 - ٣. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لتنشيط "وضع المعايرة".
 - تدور الحاوية في الجاه عقارب الساعة وضد عقارب الساعة لمدة ٣ دقائق.
- عند الانتهاء من ضبط "وضع المعايرة". تظهر الرسالة "اكتملت النهاية/الدورة (Cycle is complete)" ويتم إيقاف تشغيل الغسالة تلقائبًا.
 الغسالة جاهزة للاستخدام الآن.

٣٨_ معايرة الغسالة

جدول الدورات

جدول الدورات

(• خيار المستخدم)

عدد الدورات في الدقيقة لسرعة التنشيف (القصوى)	درجة الحرارة القصوى	مسحوق الغسيل				أقصى وزن	- C W
WF1124	(درجة مئوية)	منغم الأقمشة	غسل	Pre-wash (غسىل أولي)	(کجم)	البرنامج	
15	90	•	نعم	•	15,.	Cotton (قطن)	
15	1.	•	نعم	•	۵٫۰	Synthetics (ألياف صناعية)	
۸۰۰	1.	•	نعم	•	۳,۰	Denim (الجينز)	
۸۰۰	٤٠	•	نعم	•	۲,۵	Bedding (المضروشيات)	
15	٤٠	•	نعم	•	1,+	Dark Garment (ملابس داكنة)	
15	1.	•	نعم	•	r,.	Daily Wash (غسىل يومي)	
٤٠٠	٧٠	-	-	-	-	Eco Drum Clean (تنظیف الحاویة صدیق البیئة)	
11	٤٠	•	نعم	•	1,.	Super Eco Wash (غسل متميز صديق البيئة)	
11	٤٠	•	نعم	-	۲,۰	Outdoor Care (العناية بملابس الخروج)	
15	9.0	•	نعم	•	1,.	Baby Care (العناية بملابس الأطفال)	
۸۰۰	٤٠	•	نعم	-	۲,۰	Wool (صوف)	
٤٠٠	٤٠	•	نعم	-	r,·	(غسىل يدوي) Hand Wash	

مدة الدورة (بالدقيقة)	Quick Wash (غسىل سىرىغ)	Soak (نقع)	Intensive (مکثف)	Easy Iron (کي سهل)	Delay End (تأجيل التوقف)	Eco Bubble (الفقاعات صديقة البيئة)	البرنامج
174	•	•	•	•	•	•	Cotton (قطن)
vv	-	•	•	•	•	•	Synthetics (ألياف صناعية)
12	-	•	•	•	•	•	Denim (الجينز)
٩٣	-	•	•	•	•	•	Bedding (المضروشيات)
19	-	-	•	•	•	•	Dark Garment (ملابس داكنة)
٥٢	-	•	•	•	•	•	Daily Wash (غسىل يومي)
1.1	-	-	-	-	•	-	Eco Drum Clean (تنظيف الحاوية صديق البيئة)
11.	-	•	•	•	•	•	Super Eco Wash (غسل متميز صديق البيئة)
٧٤	-	-	-	-	•	•	Outdoor Care (العناية بملابس الخروج)
111	-	•	•	•	•	•	Baby Care (العناية ملابس الأطفال)
۵۳	-	-	-	-	•	•	Wool (صوف)
19	-	-	-	-	•	•	Hand Wash (غسىل يدوي)

- تستغرق دورة الغسل الأولي مدةٍ أطول بحوالي ١٧ دقيقة.
- تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس 60456 IEC 60456/EN 60456.
 برجاء تشفيل "وضع المعايرة" بعد التركيب (راجع صفحة ٣٨).
- ". تتوافق البرامج Ootto (فطن) عند درجة حرارة ١٠/٤٠ مئوية + intensive (مكثف) + Eco bubble (الفقاعات صديقة البيئة) مع المعيار EN60456.
 - £. Daily Wash (غسيل يومي): برنامج قصير لمعاهد الاختبارات.
- ه. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
 - عند حديد الوظيفة Intensive Wash (غسل مكثف), تتم زيادة مدة الدورة لكل الدورات.

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وجّفيف وكي (وتنظيف جاف عند الحاجة). يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس الحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر لللابس وتقليل مشاكل الغسيل.

مكن الكي عند ١٠٠° سلزيوس كحد أقصى		مواد مقاومة	\square
منوع الكي	\bowtie	الملابس الرقيقة	\Box
يمكن إجراء تنظيف جاف باستخدام أي مواد مذيبة	A	يمكن الغسيل عند ٩٥° سلزيوس	95 95
التنظيف الجاف بالبروكلوريد أو الوقود الخفف أو الكحول النقي أو R113 فقط	P	يمكن الغسيل عند ١٠° سلزيوس	₩ W
التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	F	يمكن الغسيل عند ٤٠° سلزيوس	40 40
منوع استخدام التنظيف الجاف	\otimes	يمكن الغسيل عند °۳۰ سلزيوس	30 30
		يمكن غسلها باليد	\(\lambda \)
يمكن تعليقها لتجف		تنظيف جاف فقط	\bowtie
جَفيف الملابس وهي معلقة على حمالة -		يمكن استخدام مادة تبييض مع الماء البارد	<u>√</u> d
جَفيف بالتدوير. حرارة عادية	<u></u>	يحظر استخدام مادة تبييض	X
جَفيف بالتدوير. حرارة خفيفة	0	يمكن الكي عند ٢٠٠° سلزيوس كحد أقصى	<u></u>
يحظر فخفيفها بالتدوير		يمكن الكي عند ١٥٠° سلزيوس كحد أقصى	<u></u>

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز يرجى مراعاة القوانين الخلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بخلع الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
 - · لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات السركة المصنعة لمسحوق الغسيل.
 - استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
 - وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع معايير السلامة الأوروبية (EC directive 93/68 وEN Standard (00335).

المواصفات

غسالة أمامية التحميل	النوع		
WF1124XA/ WF1124XB WF1124ZA/ WF1124ZB	اسم الطراز		
۱۰۰ عرض × ۱۰۰ عمق × ۸۵۰ ارتفاع (م)	الأبعاد		
۵۰ كيلو باسكال إلى ۸۰۰ كيلو باسكال	ضغط الماء		
L/annual ۱۷۱۱ ·	كمية الماء		
۷۱ کجم	الوزن الصافي		
۱۱٫۰ کجم	سعة الغسل والتنشيف		
۱۵۰ واط	۱۲۰ فولت	الغسل	
۱۵۰ واط	۱٤٠ فولت	العسال	
٠٠٠٠ واط	۱۲۰ فولت	11 (- 11	7717. 70 0701 47 4
٠٠٤٠٠ واط	۱٤٠ فولت	الغسل والتسخين	استهلاك الطاقة
۳۰۰ واط	۱۳۰ فولت	التنشيف	
۳۰ واط	الضخ		
15	دورة في الدقيقة		دورات التنشيف

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض خسين المنتج.

مذكرة

مذكرة



هل لديك أي أسئلة أو تعليقات؟

أو قم بزيارة موقعنا على الإنترنت	اتصل بــ	البلد
www.samsung.com	800-SAMSUNG (726-7864)	U.A.E
www.samsung.com	08000-726786	Egypt

رقم الكود DC68-03038P-05_AR